


# Everlife®

From MSI

## RIGID CORE STAIR TREAD EASED EDGE WRAPPED

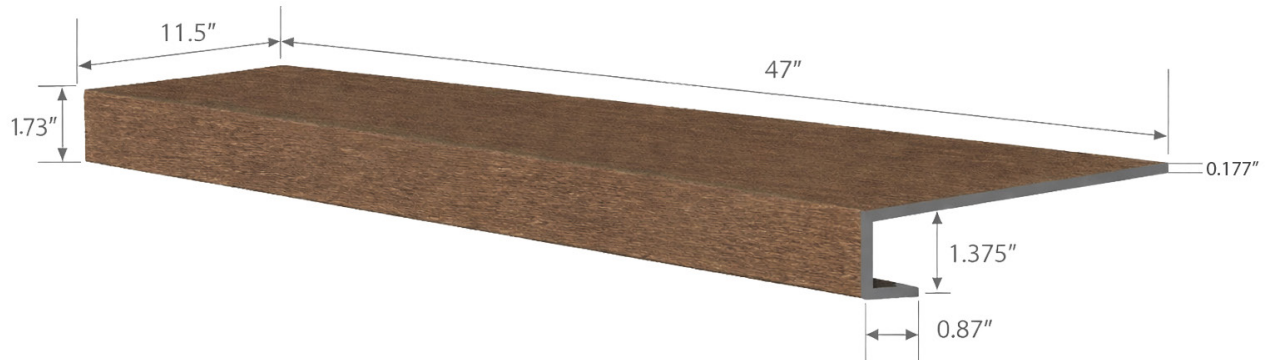

### Required Tools:

Vacuum • Finishing nailer • Safety glasses • Work gloves • Measuring tape • Painters Tape • Scraper • Urethane construction adhesive • Caulk Gun • Angle Finder • Table/Circular Saw • Tread Tool (Optional)

### Installing your Stair Tread

**Note\*** For landings and at the top of the stairs, stair tread is not to be used. Instead please use flush stair nose product (refer to flush stair nose installation guide for installation details).

1. Remove any existing flooring materials such as carpet, staples, adhesives, or debris from stairs.
2. Ensure each stair tread surface is clean, flat and dry.
3. Starting at the bottom step, measure the width and depth of the stair using a tape measure or angle finder.
4. Measure and cut each tread separately as stair sizes may vary.
5. If steps are not square, use a tread tool or angle finder for accurate angles.
6. Using a table saw or circular saw, cut the tread to the required size with the decor side facing up. (Applying painter's tape along the cut line can help prevent edge chipping during cutting.)
7. Dry fit the tread on the step to confirm proper sizing before adhesive application.
8. Apply a ¼" bead of urethane construction adhesive approximately 1" from the edges using a serpentine pattern spaced about 1.5" apart.
9. Apply additional adhesive inside the bullnose area of the stair tread to ensure a secure bond.

# Everlife®

---

From MSI

10. Position the tread on the step approximately 1" away from the riser, then slide it firmly into place against the riser.
11. Apply firm pressure across the surface of the stair tread to ensure proper adhesion. Follow the adhesive manufacturer's application and curing guidelines.
12. Secure the tread along the back edge near the riser using finishing nails placed ½" from the riser and spaced approximately 10–12" apart to prevent movement while adhesive cures.

**Note\*** Remove any excess adhesive immediately and allow sufficient drying time as recommended by the adhesive manufacturer before using the stairs.

## Maintenance, Tips, and Warnings

Dust-mop or broom can be used for daily maintenance. When necessary, clean with a MOIST cloth or mop and a neutral PH cleaner – heavy use of detergent cleaners will leave a residue and, over time, lead to a cloudy film. NEVER USE floor polish or floor cleaning wax, oil soaps, etc. These products can damage and/or leave a film on the flooring.