


From MSI



Sand Set Installation Overview

Edge Restraint

Install edge restraint or mortar set pavers along the edge.

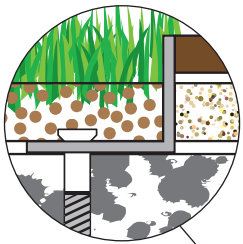

Use spacers to ensure minimum 4mm (3/16") spacing between spacers. Fill joints with polymeric sand.

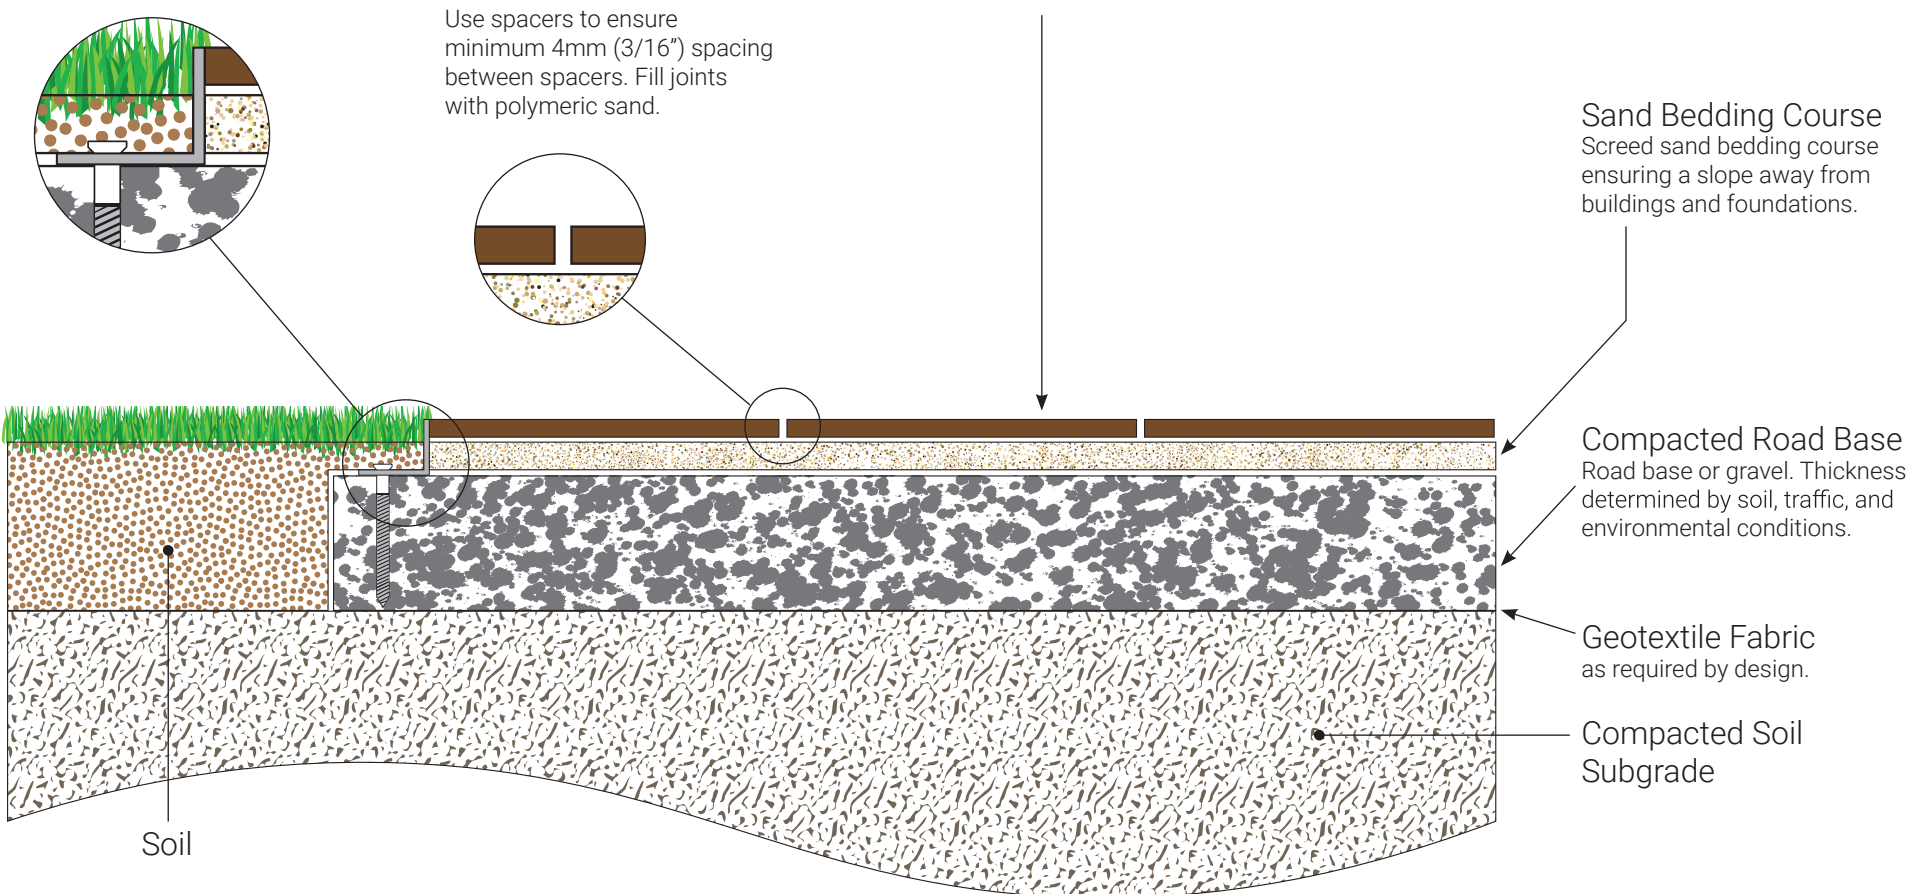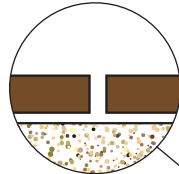

To avoid chipping the porcelain paver, only use a tile saw that has a wet cut porcelain blade.

Do not compact the porcelain pavers with a plate compactor.



From MSI

Installing Arterra porcelain pavers is very similar to installing concrete pavers.

Below are the key differences to understand before installing.

1. Use a wet saw with a porcelain blade to cut the pavers.
2. Due to the larger size of porcelain pavers, you must ensure the sand bedding course is compacted and flat. If the prepared surface is not flat, it may lead to rocking and/or lippage. Slope in one direction away from the structure, either towards grade or towards a linear drain.
3. Spacers must be used between pavers to provide enough space for polymeric sand
4. Do not use a plate compactor on the pavers.
5. For the joints, use a high quality polymeric sand designed to be used with porcelain pavers.