

# MSI

Making Dream Surfaces Attainable

## Shower Surrounds

Product Catalog 2020


# MSI

Making Dream Surfaces Attainable

Founded in 1975, MSI is the leading distributor of countertop, flooring, wall tile and hardscaping products in the United States and Canada. MSI imports materials from over 36 countries while maintaining purchases offices in India, Turkey, Brazil, China and Italy. Headquartered in Orange, California, MSI's nationwide system of more than 20 state-of-the-art-distribution centers is designed for efficiency.

MSI is committed to providing our customers with a diverse assortment of affordable and accessible flooring, countertops, wall tile, luxury vinyl tile and hardscaping products from around the world. By providing attentive partner support, we aim to be at the forefront of products and business innovation.



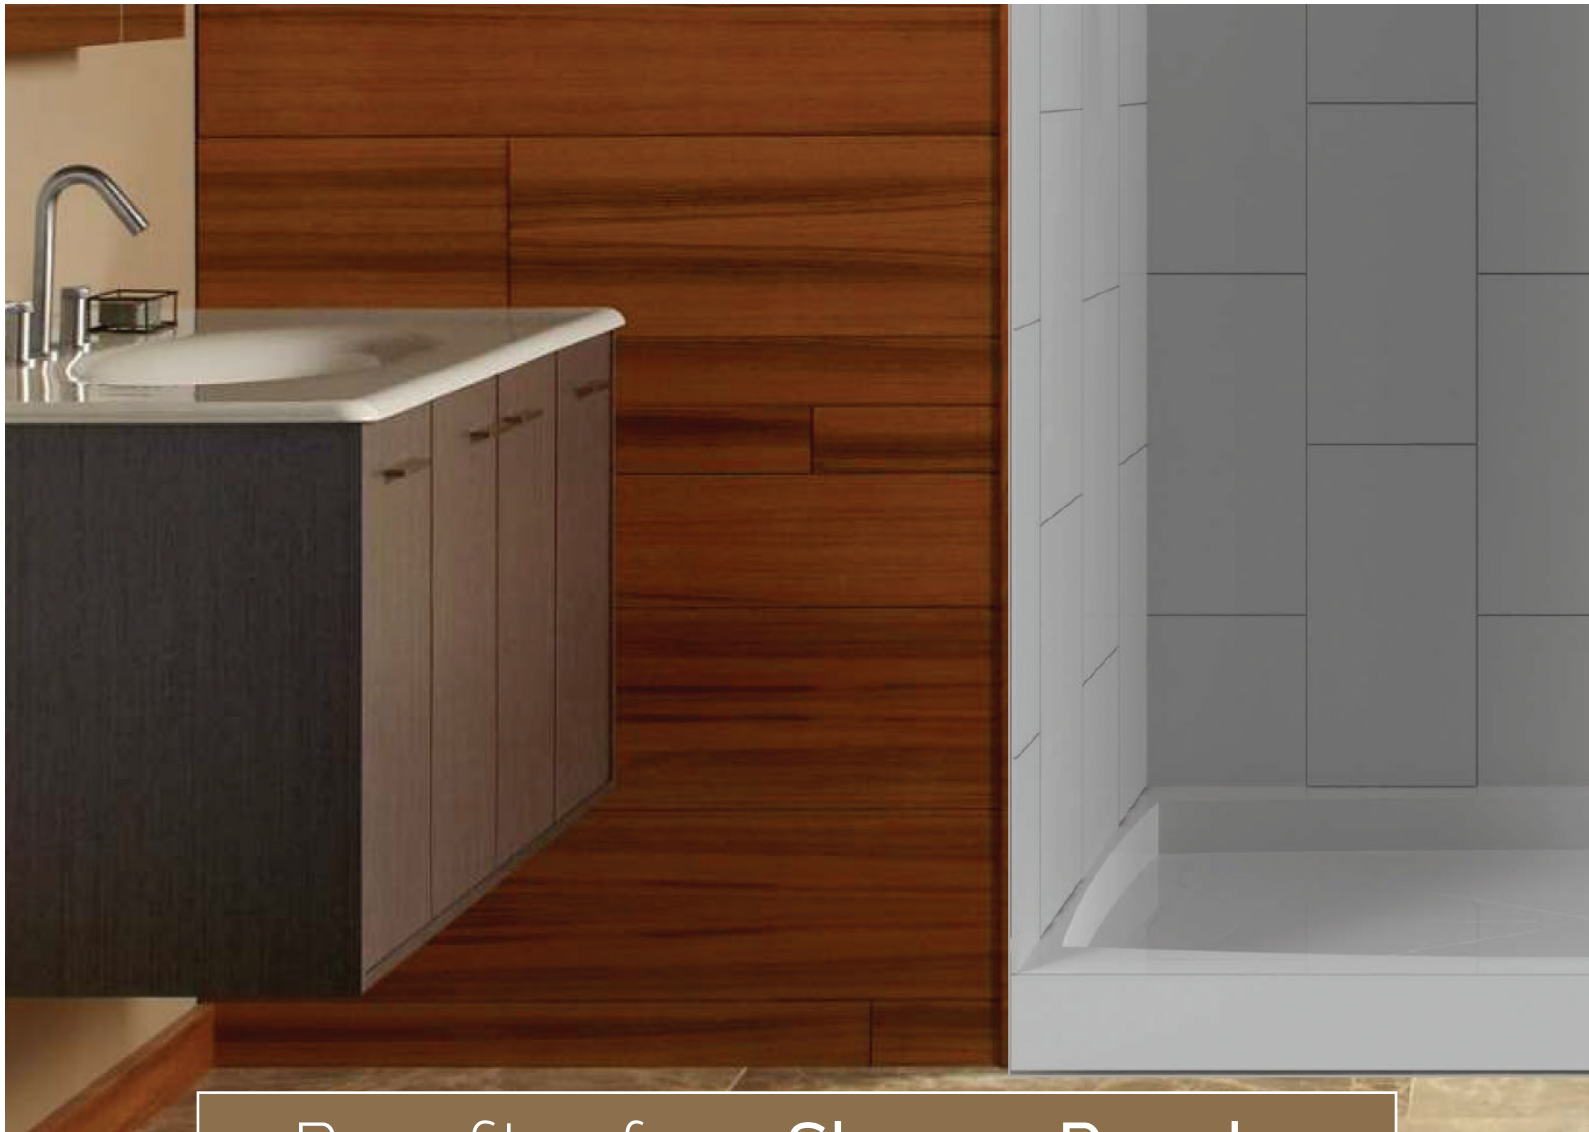

## Benefits of our Shower Panels

### Our Experience

All our panels are made on site just as we have done since we first went into business over eight years ago.

It's this expertise which keep us at the top of our market and ensures that every panel manufactured today is made to the same high standard that we have maintained over the last eight years.



### Innovation


We are committed to using the most high standard materials when making our shower panels.



### Our 10 Year Guarantee

Our panels are guaranteed to remain watertight and waterproof for ten years from your date of purchase. No small prints. As long as they've been installed correctly, we're that confident of our system.



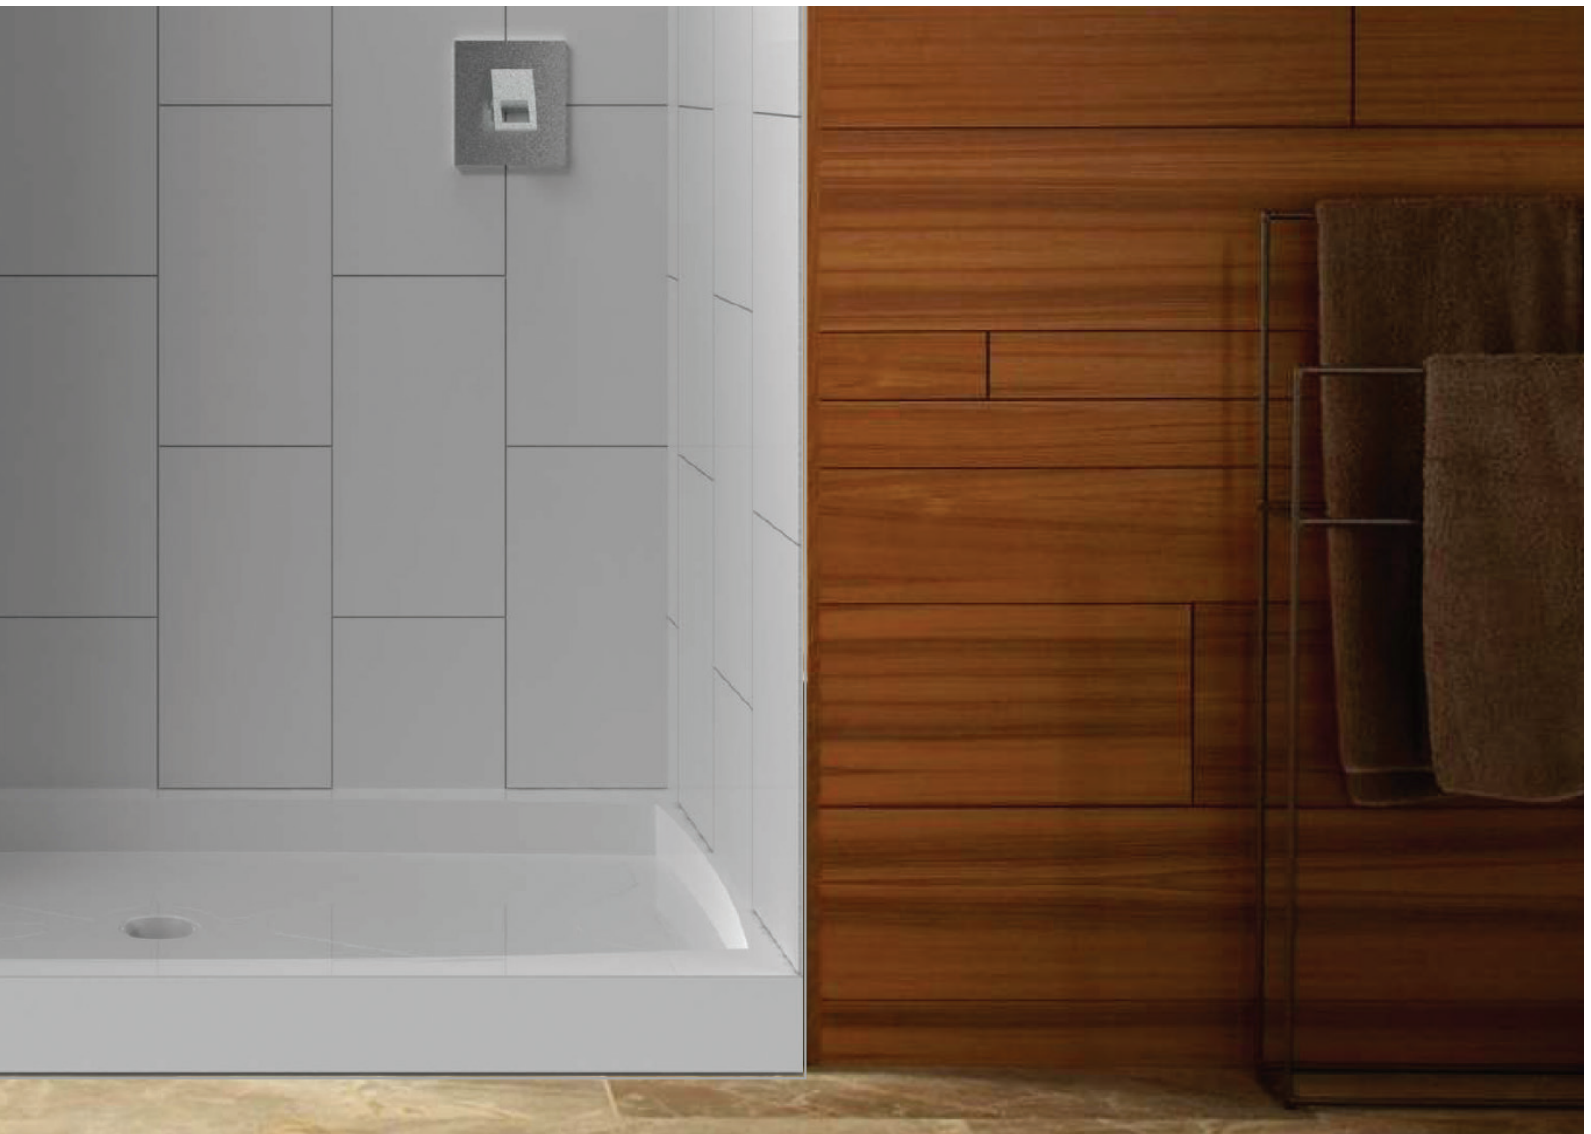

### Cultured Marble

As well as our classic finishes we also offer fully color coordinated profiles for our cultured marble meaning that every visible match beautifully.

### No Grout

Unlike tiles no grout is required to fit the tub surround system, which means that our panels require very little maintenance to keep them looking clean.

### You'll save more time

The tub surrounding system is so much quicker to fit than conventional tiles that you may find yourself with enough time to put your feet up and relax.

### You'll save more money

Unlike with tiles an expert fitter is not required to fit the Tub surround system. This means it takes less time to fit and as an expert is not required, on average makes the tub surround system around 25% cheaper than tiles.






# Index

About Us	2
Tub Surrounds	6
Shower Bases	23
Accessories	41
Free Standing Bath Tubs	47
Shower Walls Instructions	49
FAQ	59
Contact Us	61


## Tub Surrounds

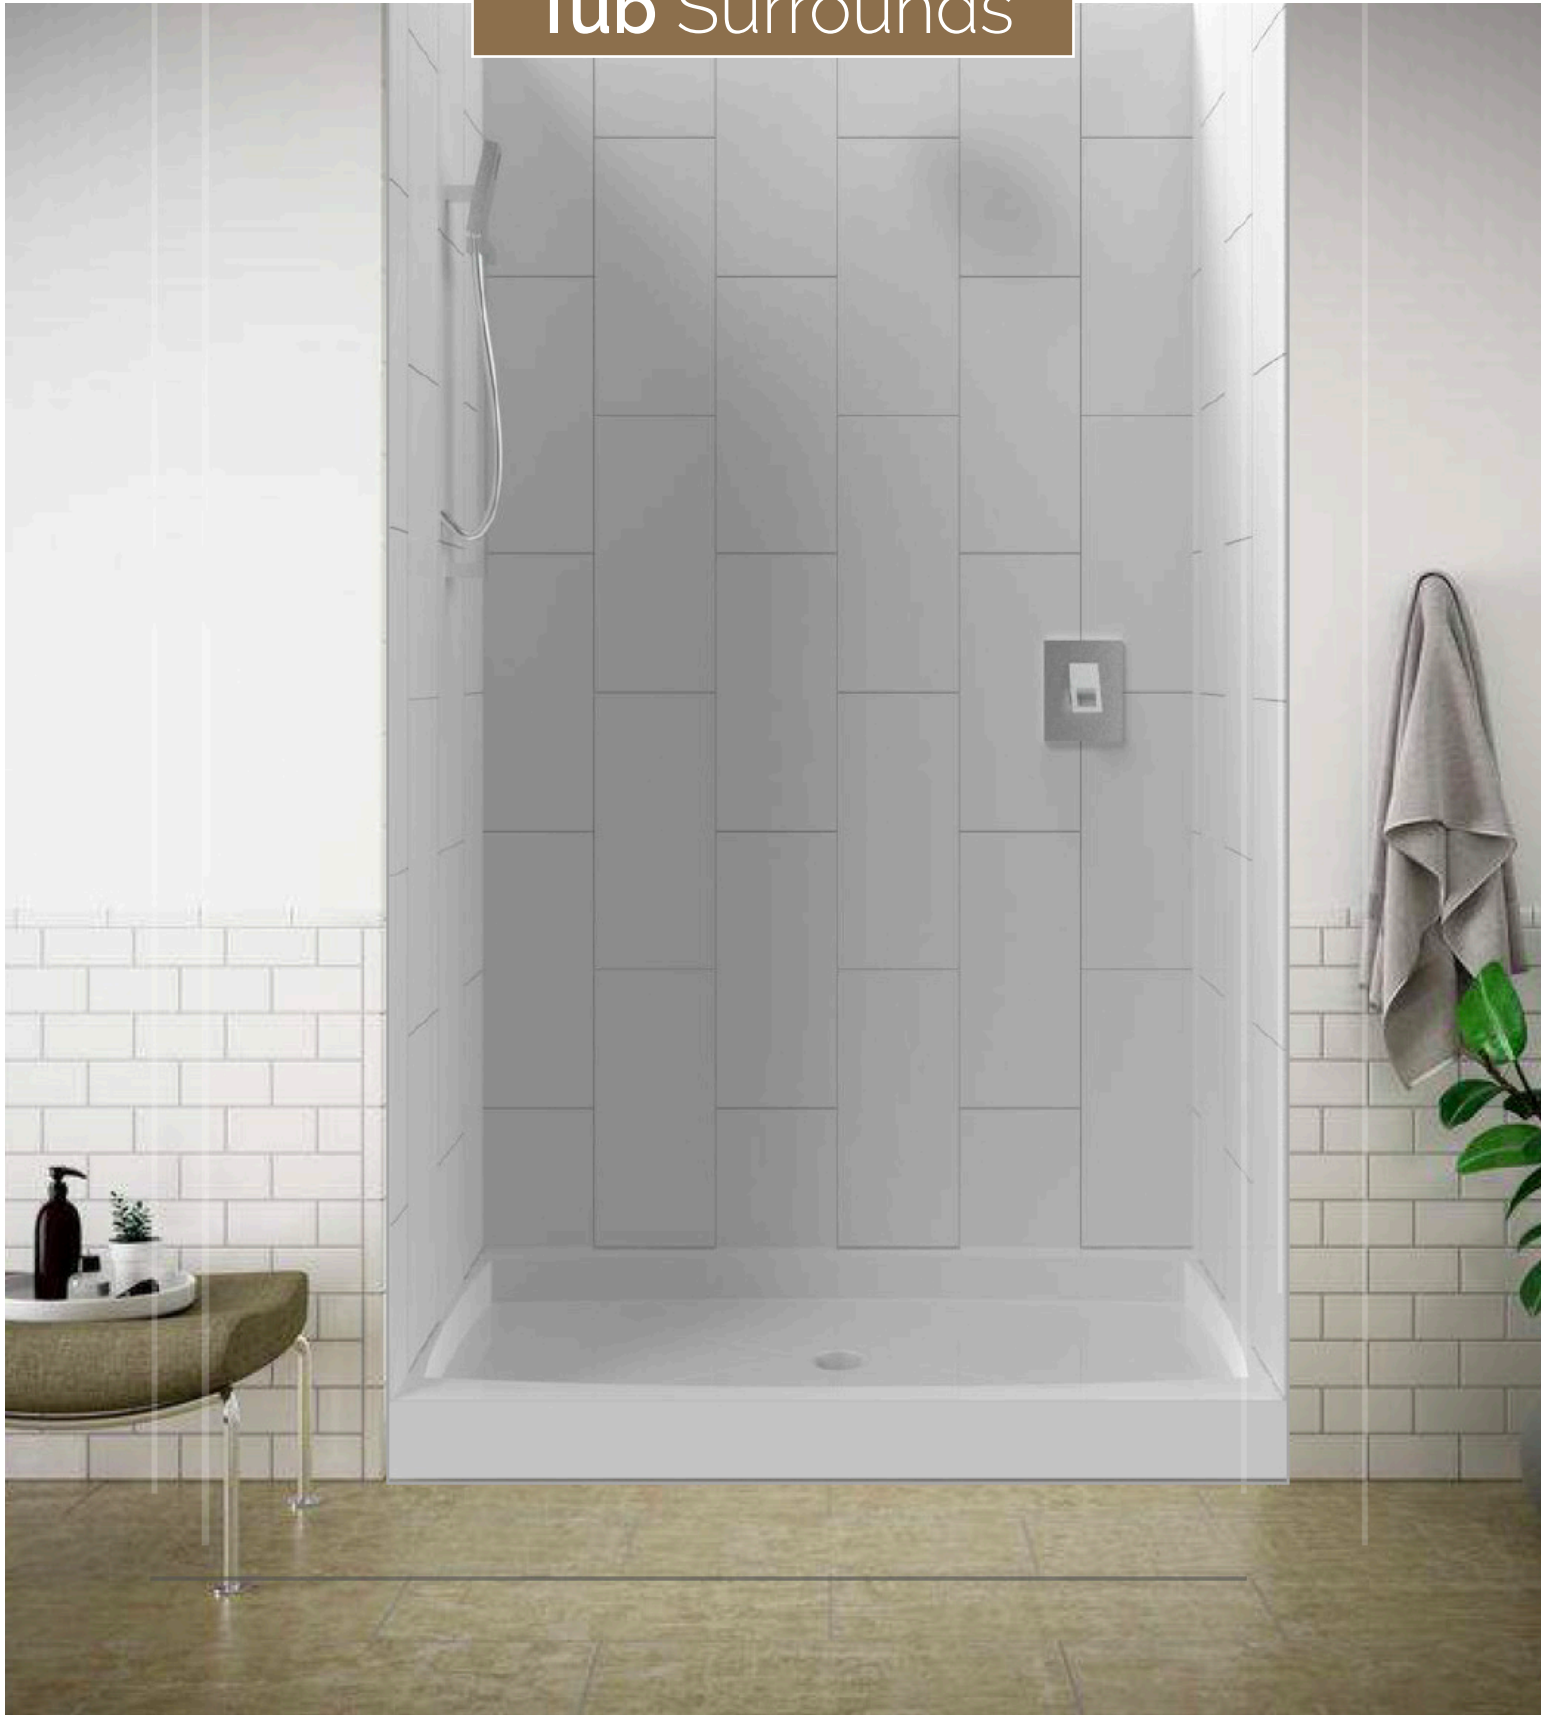


## Our Colors



SOLID WHITE

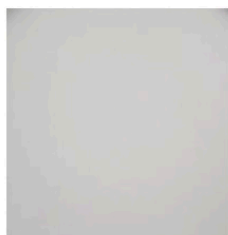


SOLID CREAM

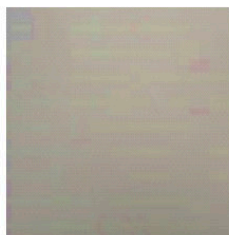

SOLID BONE



SOLID BONE

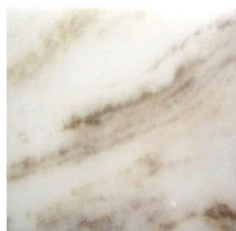

MEXICAN SAND




ITALIAN WHITE




WHITE BONE



AURORA

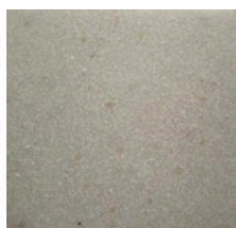

LINEM

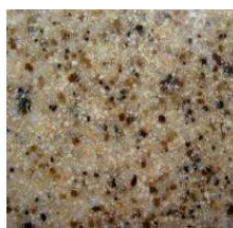


CAPUCCINO



WALNUT




PEWTER

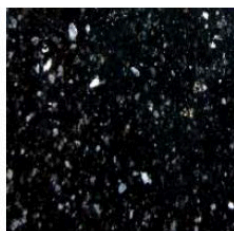

GALAXY BLACK



CRYSTAL ALMOND

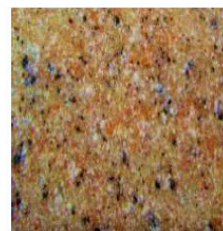

SANDY BEACH

# Trendy



## Contemporary

### Standard Features

- Individual brick size 6" x 24" ( 15 x 61 cm)
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## Vertical Vision

### Standard Features

- Individual brick size 6" x 24" ( 15 x 61 cm)
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge





# Trendy

## 6"x24" Stacked



### Standard Features

- Individual brick size 6" x 24" ( 15 x 61 cm) Stacked detail.
- Up to 96" (244 cm) Max height..
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge




## 12"x24" Tile Smooth

### Standard Features

- Simulated tile pattern.
- Brick size 31" x 61".
- Up to 96" (244 cm) Max height..
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish..

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

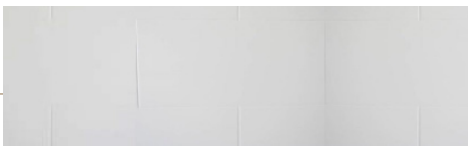

# Trendy

## 4"x15" Confetti



### Standard Features

- Individual brick size 4" x 15" ( 10 x 38 cm)
- Up to 96" (244 cm) Max height..
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## 6"x24" Vision

### Standard Features

- Individual brick size 6" x 24" ( 15 x 61 cm)
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



# Latest Designs

## 6"x24" Linear Listello



### Standard Features

- Individual "tile" size 6" x 24" ( 15 x 61 cm)
- Up to 96" (244 cm) Max height..
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max width.
- ¼ Nominal thickness.
- Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge




## Chevron-H4

### Standard Features

- New Chevron H4 design
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36"(91 cm) Max
- ¼ Nominal thickness.
- Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

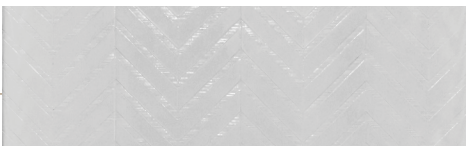

# Latest Designs

## Dune



### Standard Features

- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge




## Chevron-FFI

### Standard Features

- New Chevron for FFI design
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

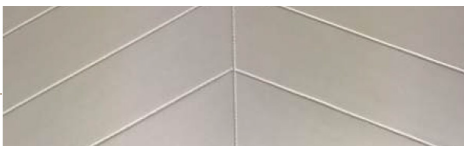



# Latest Designs

4"x8"



## Standard Features

- New 4x8 design.
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side-walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

## Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge




## Stars

### Standard Features

- New Stars design.
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side-walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

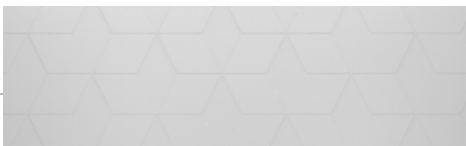

## Latest Designs

### 10"x 20" Vertical




#### Standard Features

- New 10x20 Vertical design.
- Up to 96" (244 cm) Max width.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & matte Finish.

#### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

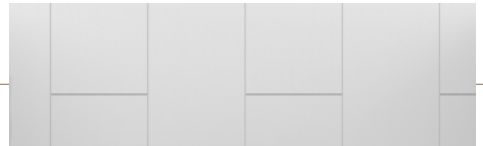

### Interval

#### Standard Features

- New Interval design
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

#### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## Classics

### Diamond




#### Standard Features

- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side-walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

#### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

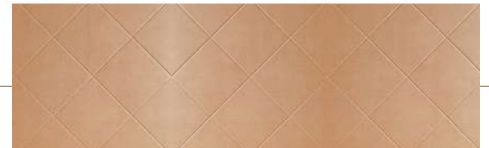


### Stars

#### Standard Features

- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Matte Finish.

#### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge

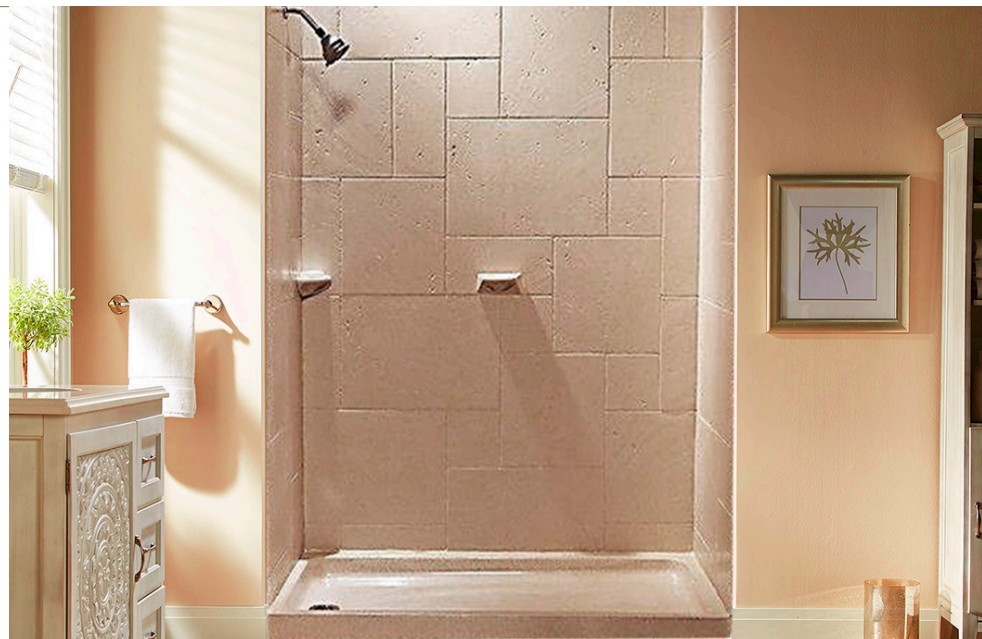



# Classics

## 8"x10" Tile Smooth



### Standard Features

- Individual "tile" size, 8"x10" (20.4x25.4 cm)
- Up to 96" (244 cm) Max width.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## 3"x6" Subway

### Standard Features

- Individual "tile" size, 3"x6" (7.7 x 15.3 cm)
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge





# Classics

## Smooth



### Standard Features

- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## 6"x 10" Tile Smooth

### Standard Features

- Brick-size 6" x 10" (15.3" x 25.5 cm).
- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Matte Finish.


### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips
- 2 x ¾" x up to 96" Trim Strips
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



# Classics

## 8"x8" Smooth Tile

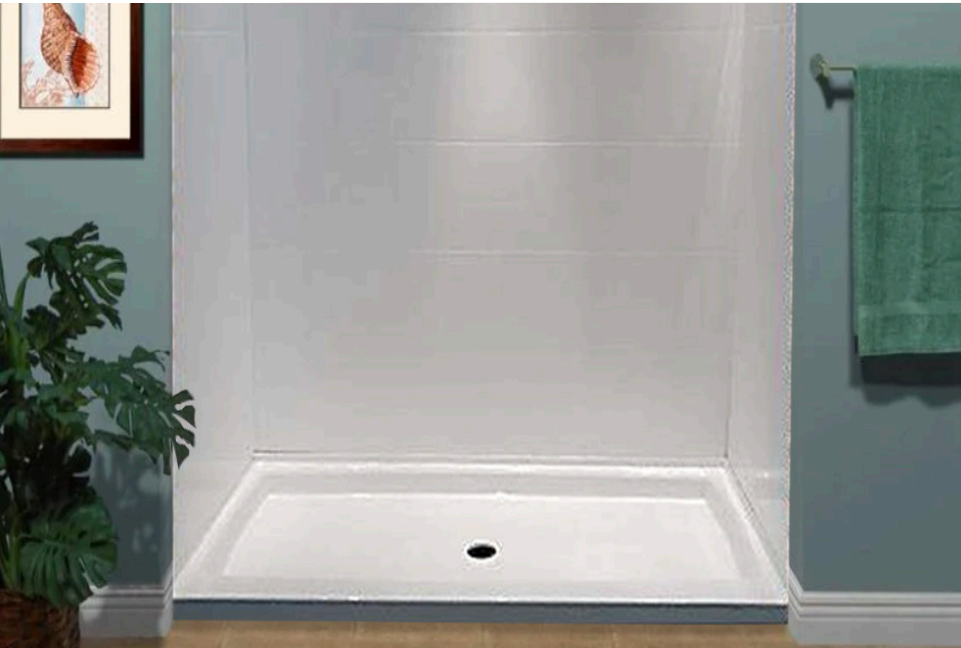

### Standard Features

- Brick size 8"x8" (20.4x25.4 cm)
- Up to 96" (244 cm) Max width.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.

### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge



## 12"x12" Tile Colonial

### Standard Features

- Up to 96" (244 cm) Max height.
- Back Wall: 60" (152 cm) Max width.
- Side Walls: Up to 36" (91 cm) Max width.
- ¼ Nominal thickness.
- Gloss & Matte Finish.


### Optional Accessories

- 2 x 1 ¼" x up to 96" Trim Strips.
- 2 x ¾" x up to 96" Trim Strips.
- Soap Dishes
- Shampoo Shelves
- Foot Rests
- Accessory ledge




# Technical Data


Diamond

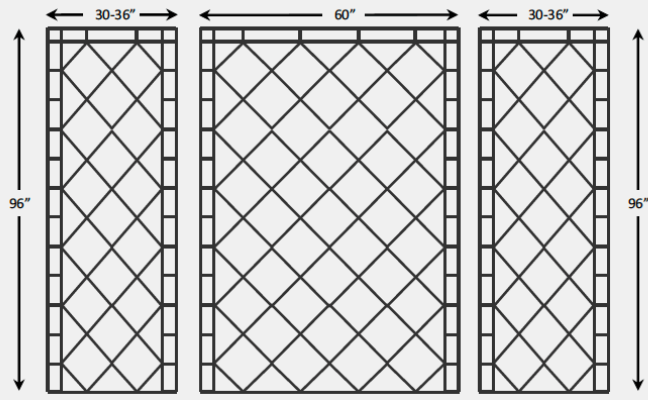


12" x 12" Colonial

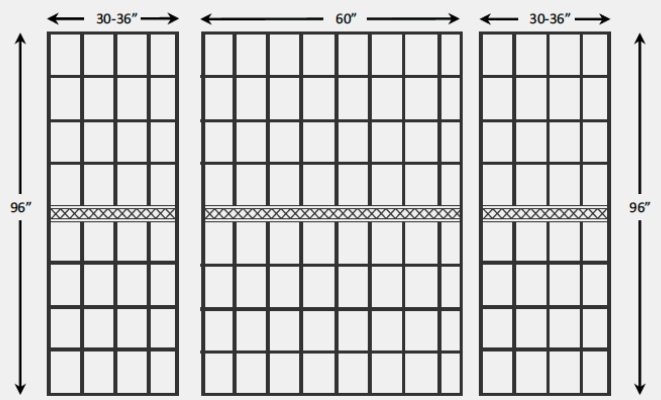


Travertine Tile - Aragon

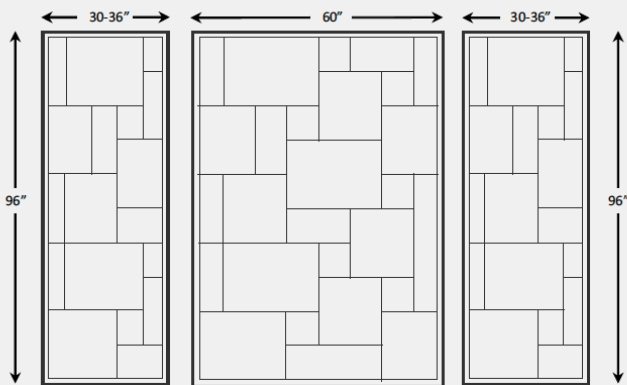


6" x 10" Smooth Tile

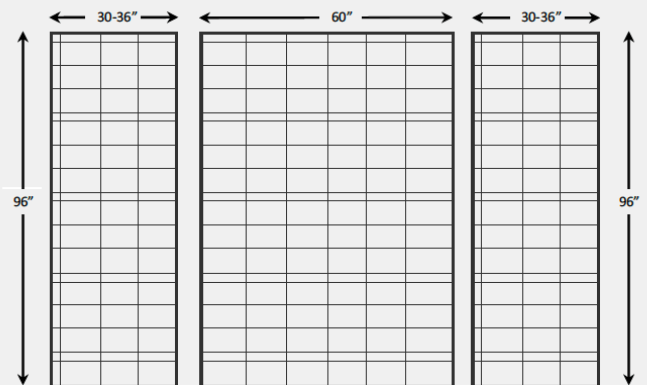

8" x 8" Smooth Tile

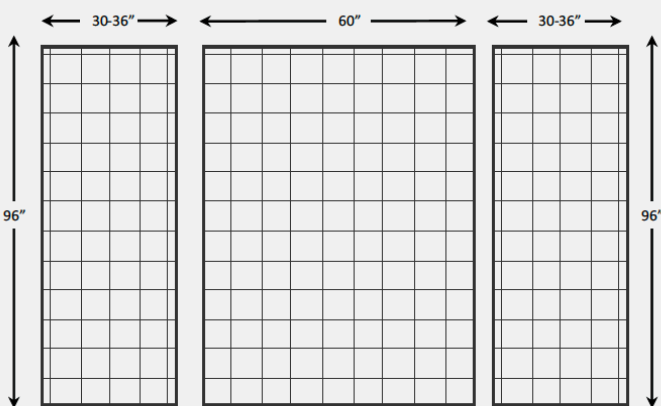


13" x 20" Tile slab

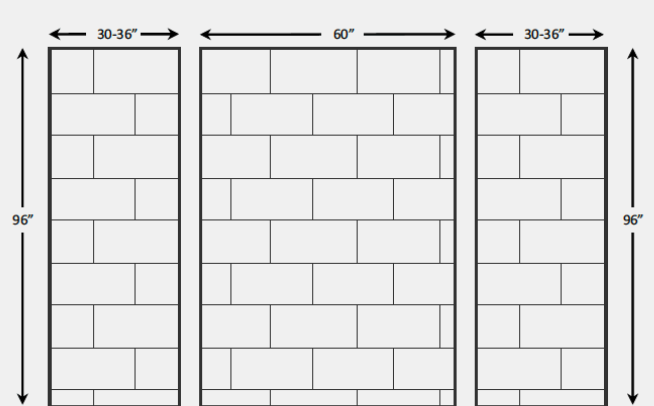


# Technical Data


6" x 24" Contemporary

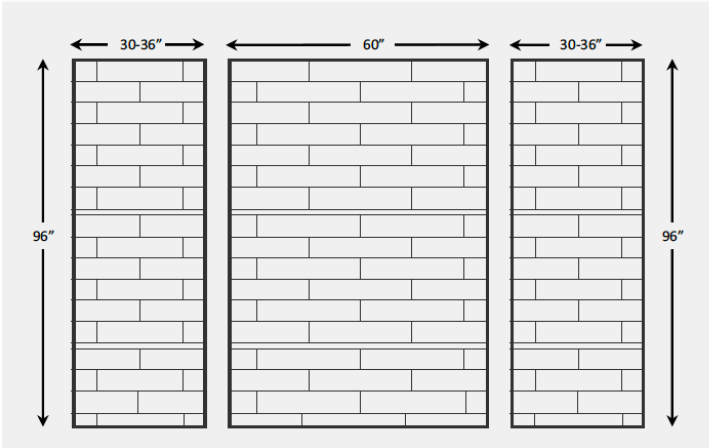


Vertical Vision

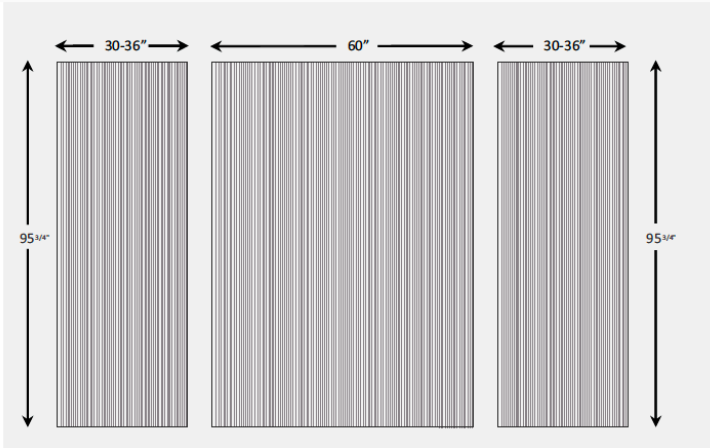


6" x 24" Stacked

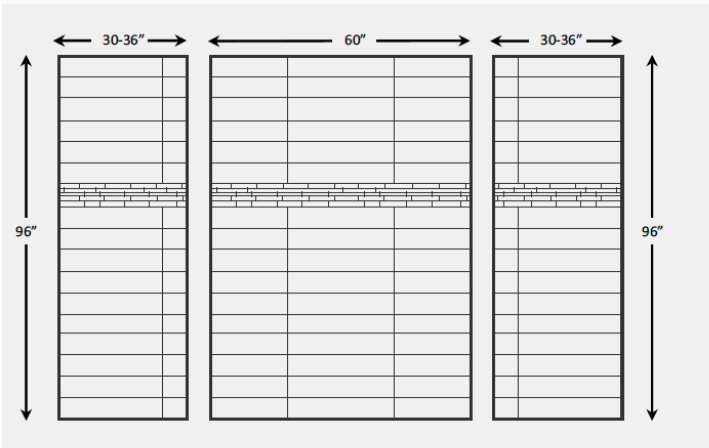


12" x 24" Tile smooth

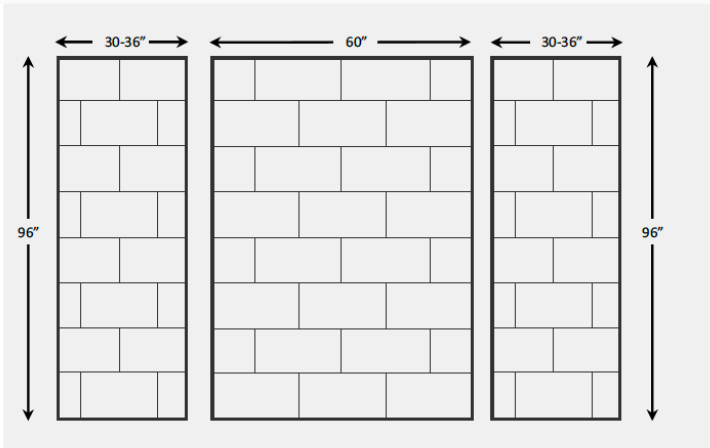

4" x 15" Confetti

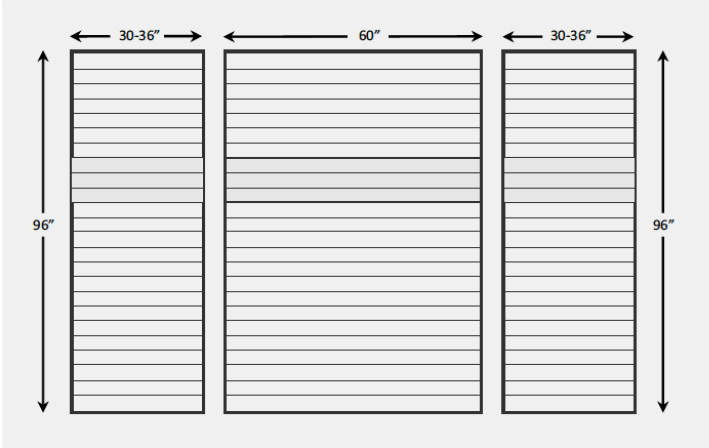


6" x 24" Vision

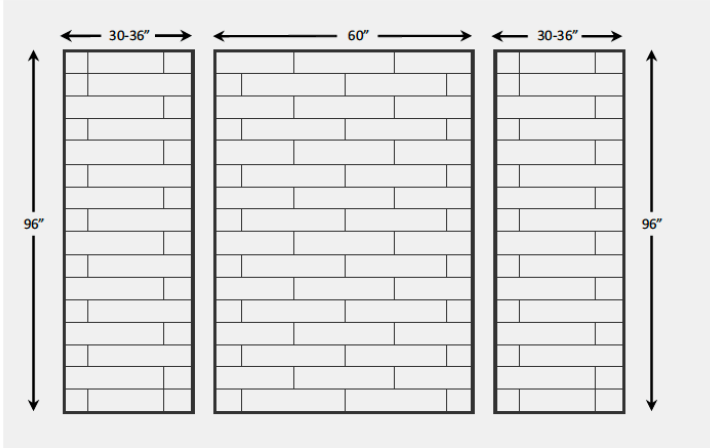




# Technical Data


Interval

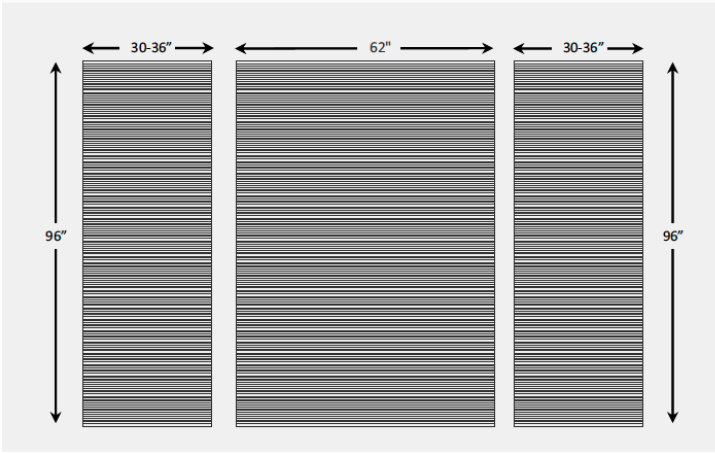


4" x 8"

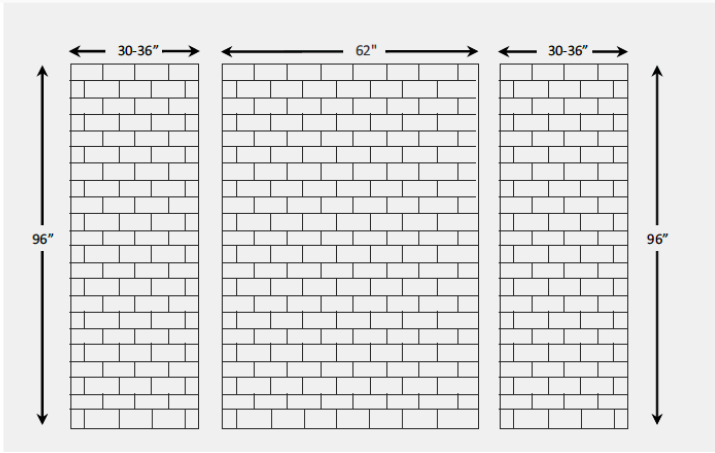


8" x 10" Tile Smoth

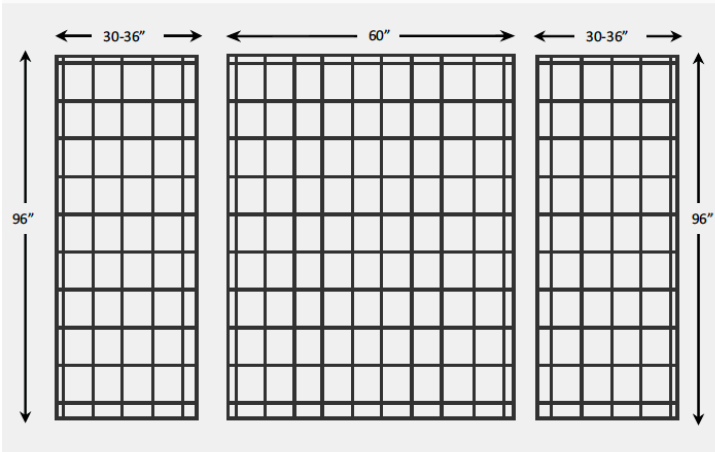


3" x 6" Subway

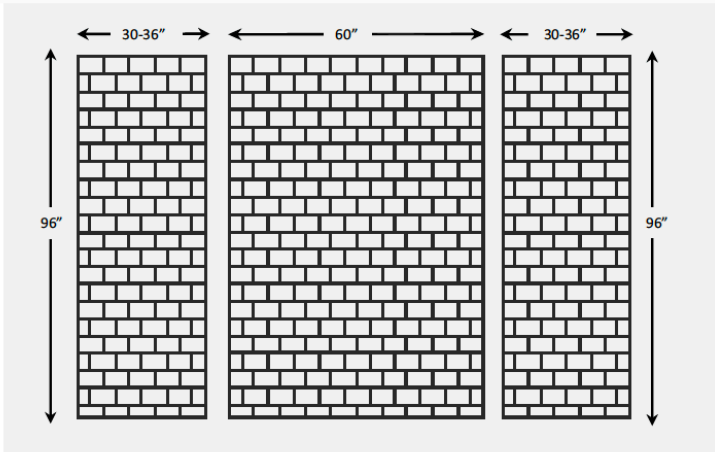

3" x 6 Vision

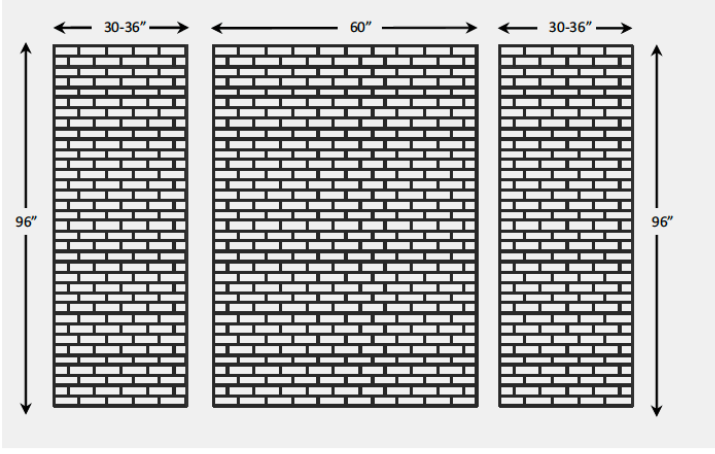


Smoth

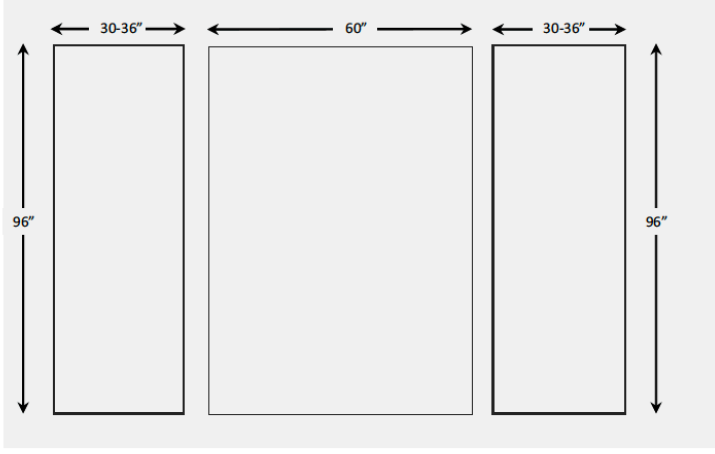


# Technical Data


6" x 24" Linear Listello

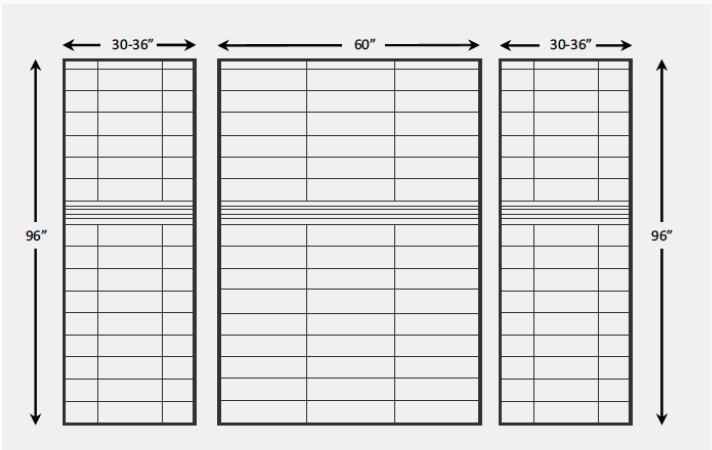


Dune

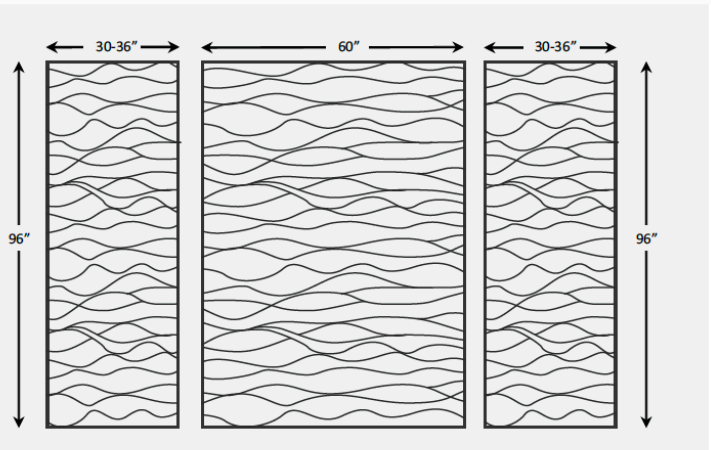


Chevron H4

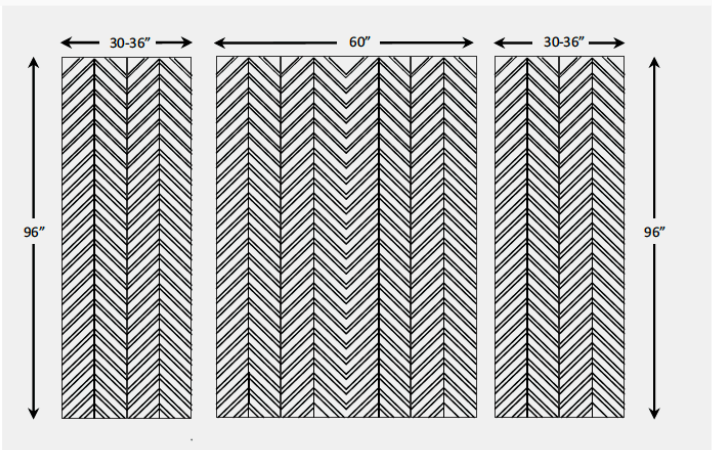


Chevron FFI

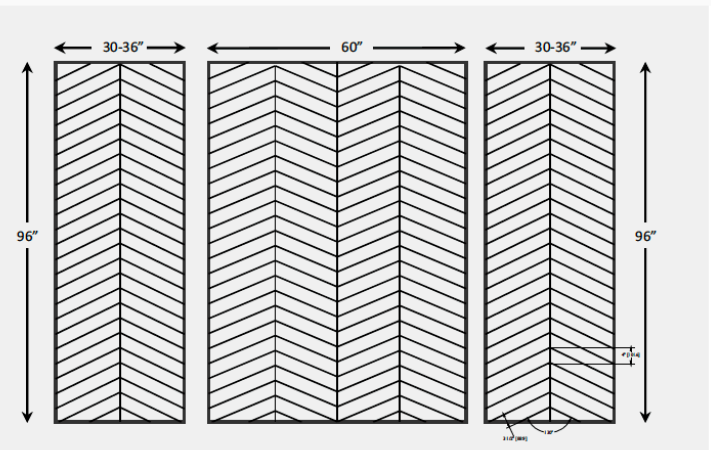

Stars

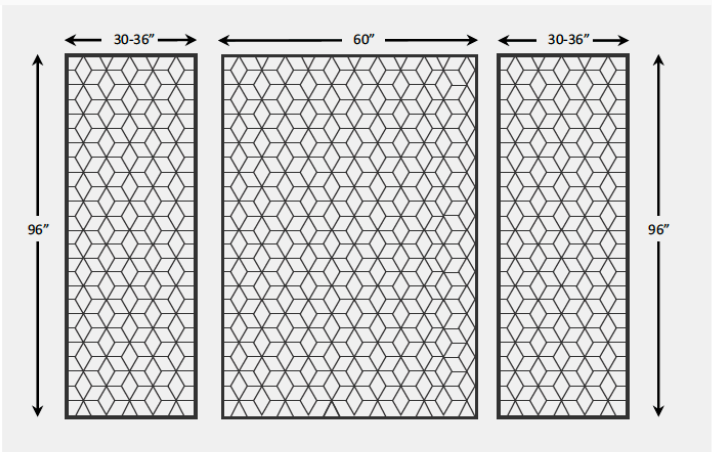

10" x 20" Vertical

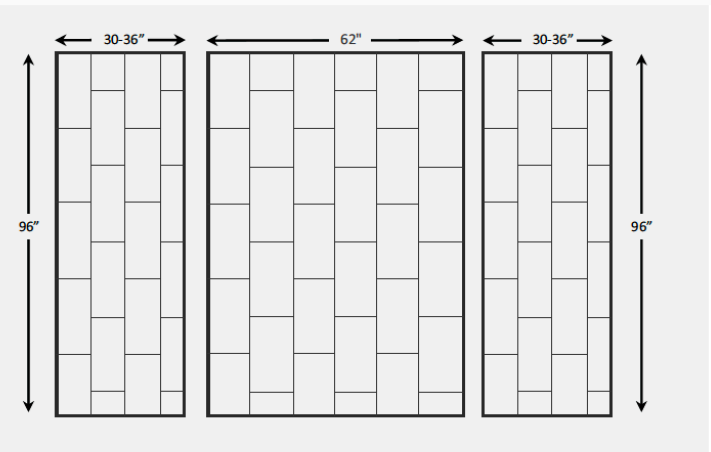

# Shower Bases



## Shower Bases

**30" x 60"**



### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

### Optional Accessories

- Size: 30" x 60" size.
- Drain: Center 14 -30


**32" x 60"**

### Standard Features


- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

### Optional Accessories

- Size: 32" x 60" size.
- Drain: Center 15 -30

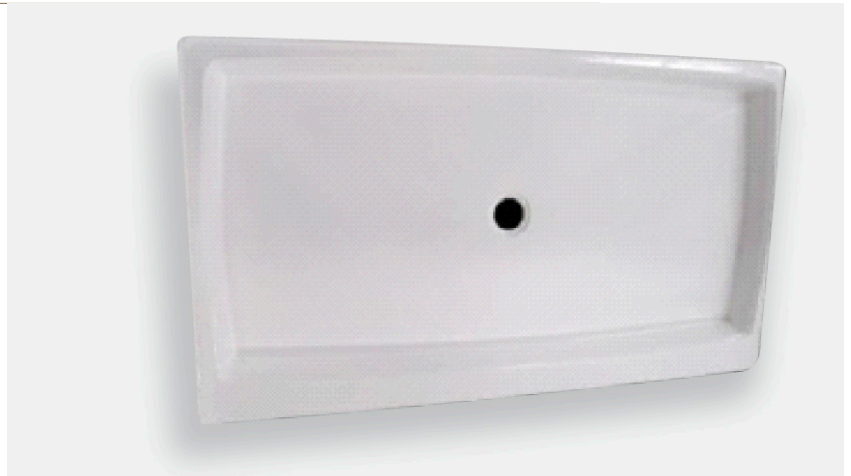

**34" x 60"**

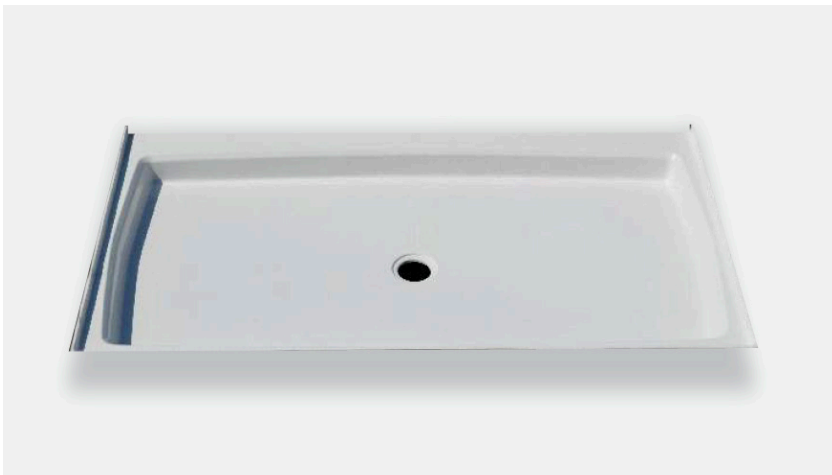

### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistan gel coat surface.


### Optional Accessories

- Size: 34" x 60" size.
- Drain: Center 16 -30



## Shower Bases

**36" x 60"**

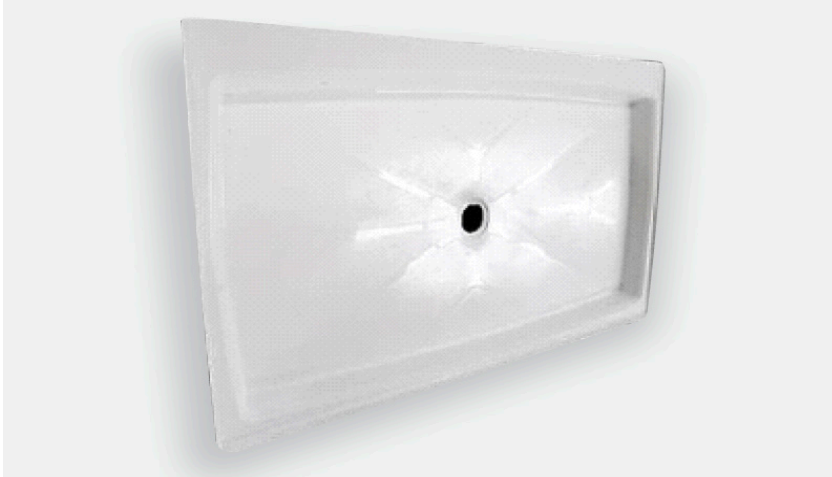

### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

### Optional Accessories

- Size: 36" x 60" size.
- Drain: Center 14 -30


**34" x 72"**

### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non -slip finish.
- Abrasion resistan gel coat surface.

### Optional Accessories

- Size: 34" x 72" size.
- Drain: Center 16 -30

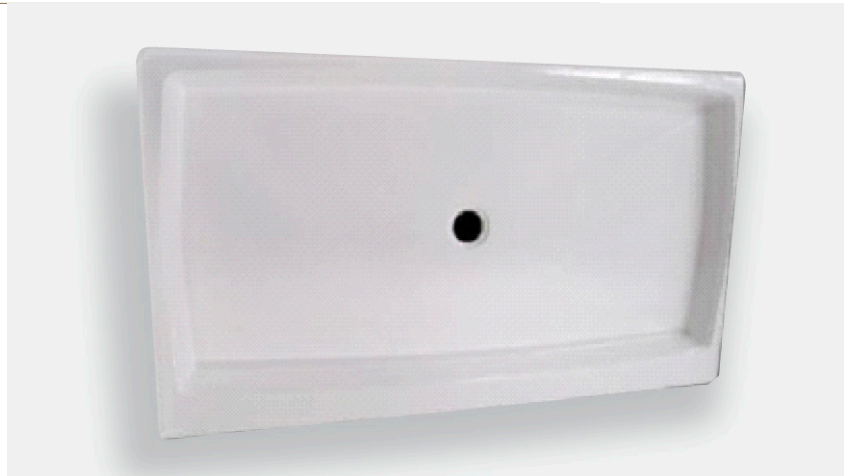

**36" x 36"**




### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant .
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistan gel coat surface.

### Optional Accessories

- Size: 36" x 36" size.
- Drain: Center 17 -18

### 36" x 60" Reversible Shower Base

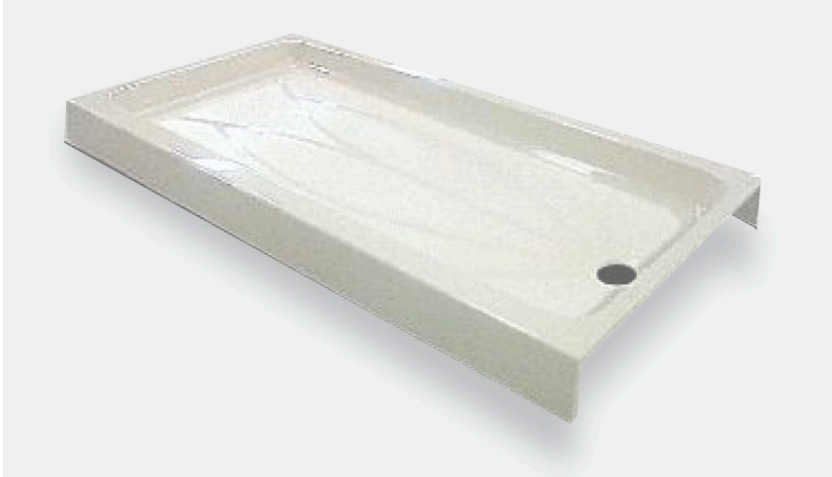

#### Standard Features

- Available in left hand and right hand version
- Designer for tub replacements.
- 2" Threshold on each side.
- Solid one-piece construction.
- Pre levelled, rest on sub-floor.
- Mould and mildew resistant.
- Stain resistant and easy to clean.
- Waterproof and leak proof.

#### Optional Accessories

- Size: 30" x 60" size.
- Offset Drain


### 30" x 60" Reversible Trench Drain Shower Pan 2" Threshold

#### Standard Features


- Solid one – piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non – slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.

#### Optional Accessories

- Size : 30" x 60" size.
- Drain: Center 15-3 ½.
- Trench: 4½ width
- Threshold 2"

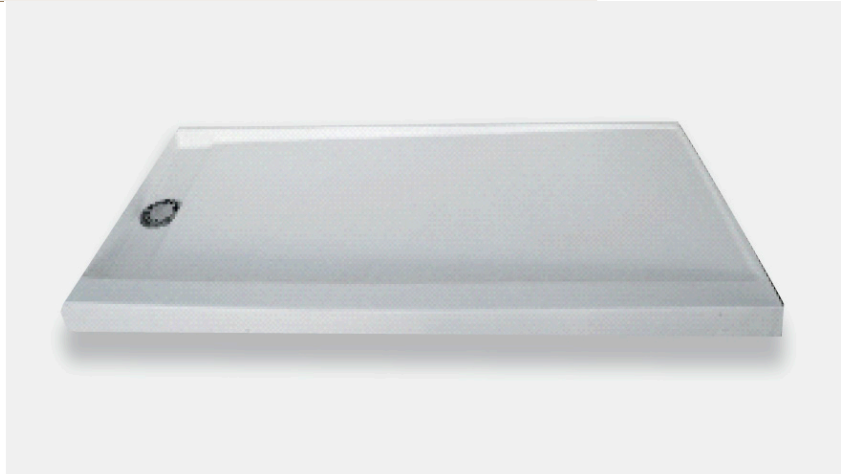

### 30" x 60" Reversible Trench Drain Shower Pan 3" Threshold

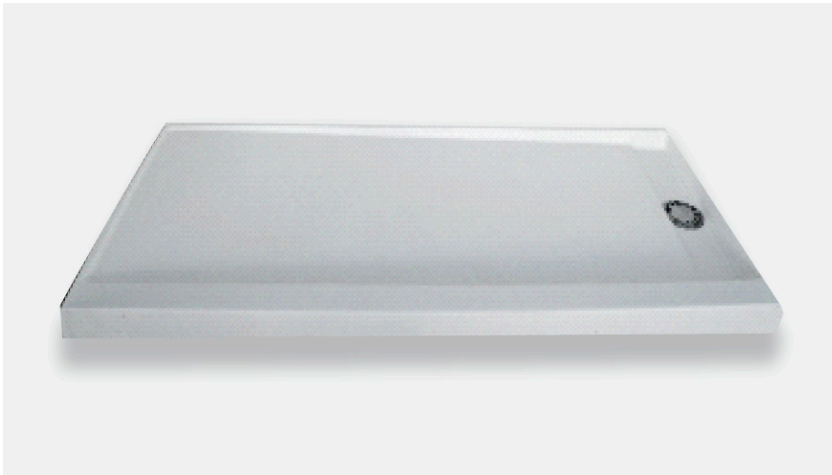

#### Standard Features

- Solid one – piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non – slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.

#### Optional Accessories

- Size : 30" x 60" size.
- Drain: Center 15-3 ½.
- Trench: 4½ width
- Threshold 2"

### 36" x 60" Off Set Trench Drain Shower Pan



#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover no Included.

#### Optional Accessories

- Size : 36" x 60" size.
- Drain: Center 18-3 ½.
- Trench: 4½ width

### 34" x 72" Off Set Trench Drain Shower Pan

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover no Included.

#### Optional Accessories

- Size : 34" x 72" size.
- Drain: Center 17-3 ½.
- Trench: 4½ width



### 30" x 60" Shower Pan Trench Drain w/ Flange



#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover no Included.

#### Optional Accessories

- Size : 34" x 72" size.
- Drain: Center 17.5
- Trench: 4½ width

### 36" x 42" Center Drain



#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Will not mold and mildew.
- Extremely sanitary
- Textured non -slip finish.
- Abrasion resistan gel coat surface

#### Optional Accessories

- Size: 36" x 42" size.
- Drain: Center


### 48" x 36" Shower Base

#### Standard Features

- Single piece cast polymer (Cultured Marble)
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 48" x 36" size.
- Drain: Center

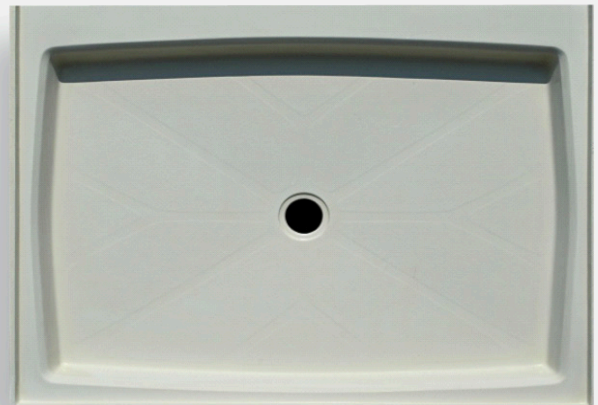

### 48" x 60"



#### Standard Features

- Single piece cast polymer (Cultured Marble)
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.


#### Optional Accessories

- Size: 48" x 60" size.
- Drain: Center



## Shower Bases

### 32" x 60" Reversible Trench Drain Shower Pan

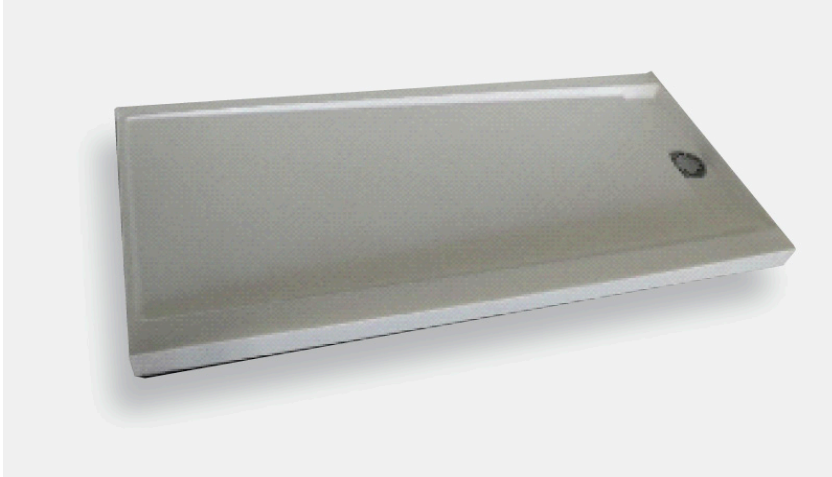

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.

#### Optional Accessories

- Size : 32" x 60" size.
- Drain: Center 16-3 ½.
- Trench: 4½ width

### 34" x 60" Reversible Trench Drain Shower Pan

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Will not Mold and mildew.
- Extremely sanitary
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.

#### Optional Accessories

- Size : 34" x 60" size.
- Drain: Center 17-3 ½.
- Trench: 4½ width.



### 36" x 54"



#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size : 36" x 54" size.

## Shower Bases

### 36" x 64" Barrier Free Shower Base



#### Standard Features

- Solid one – piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non – slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover no Included.

#### Optional Accessories

- Size: 36" x 64" size.
- Drain: Center 30-32

### 36" x 36" Neo Angle

#### Standard Features

- Solid one-piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 36" x 36" size.
- Drain: Corner 11.5



### 42" x 42" Neo Angle




#### Standard Features

- Solid one-piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 42" x 60" size.
- Drain: Corner 11.5

### 30" x 60" Off-Set

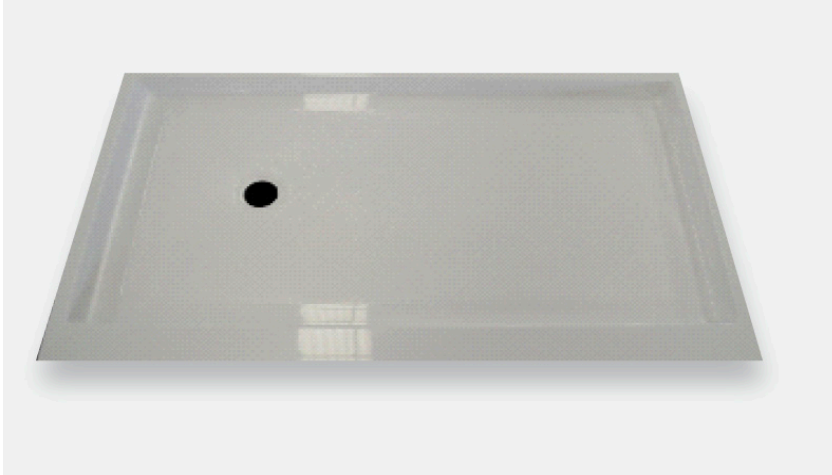

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.

#### Optional Accessories

- Size : 32" x 60" size.
- Drain: Center 16-3 ½.
- Trench: 4½ width


### 35<sup>1</sup>/<sub>4</sub>" x 59" Off-Set Drain

#### Standard Features


- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Will not Mold and mildew.
- Extremely sanitary
- Textured non - slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 35 ¼ " x 59" size.
- Drain: Off -set drain

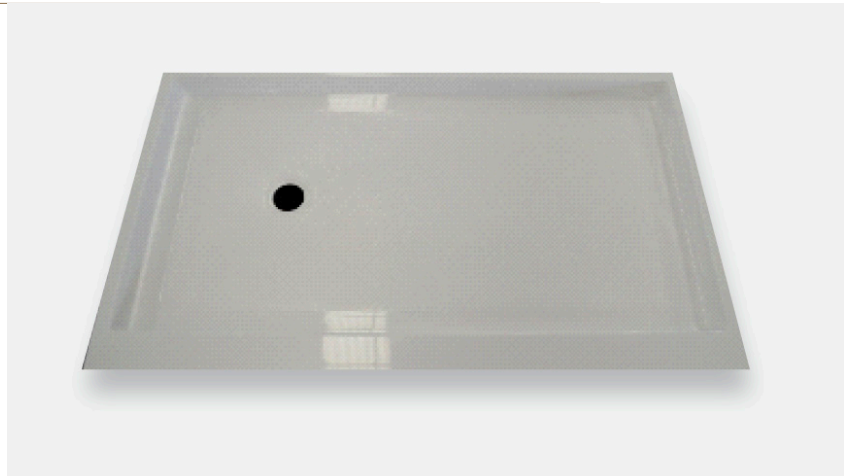

### 36" x 54" Standard Rectangle Shower Pan Off-Set Drain

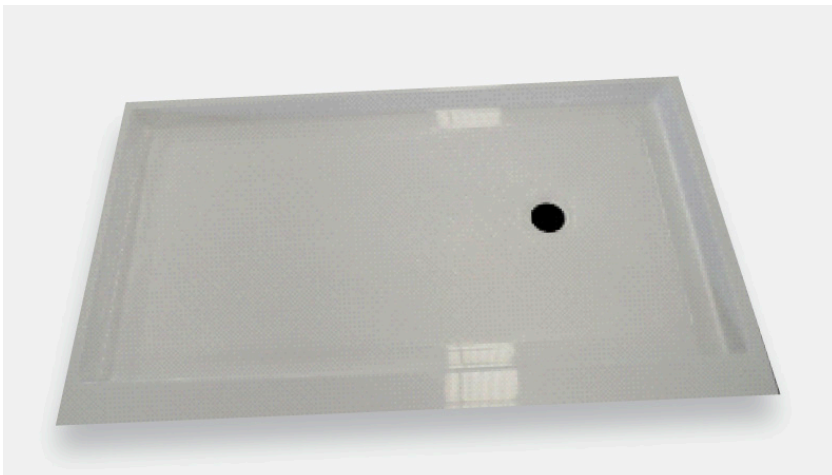

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size : 36" x 54" size.
- Drain: 9" Off-Set drain.

## Shower Bases

### 36" x 60" Corner Drain



#### Standard Features

- Solid one – piece construction.
- Pre levelled rests on sub-floor.
- Will not mild and mildew.
- Extremely sanitary
- Textured non - slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 36" x 60"
- Drain: Corner Drain

### ADA Roll in center drain shower pan

#### Standard Features


- Solid one-piece construction.
- Pre levelled rests on sub-floor.
- Will not mold and mildew.
- Extremely sanitary.
- Textured non-slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size: 30" x 60".
- Drain: Off-set drain.



### Custom Shower Base

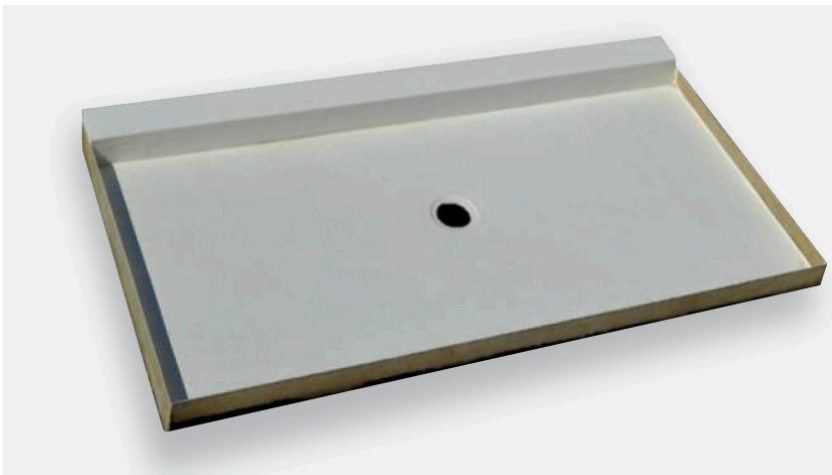


#### Standard Features

- Solid one-piece construction including fiberglass flanges and ultra curb threshold
- ADA- approved anti slip finish.
- Pre-sloped to the drain.
- Rests on sub floor.
- Mold mildew and bacteria resistant.
- "Grout free" and non-porous.
- Stain resistant and easy to clean.
- Abrasion resistant gealcoat surface.
- Waterproof and leak proof.



## Shower Bases

### 34"x60" Tile Pattern Shower Pan

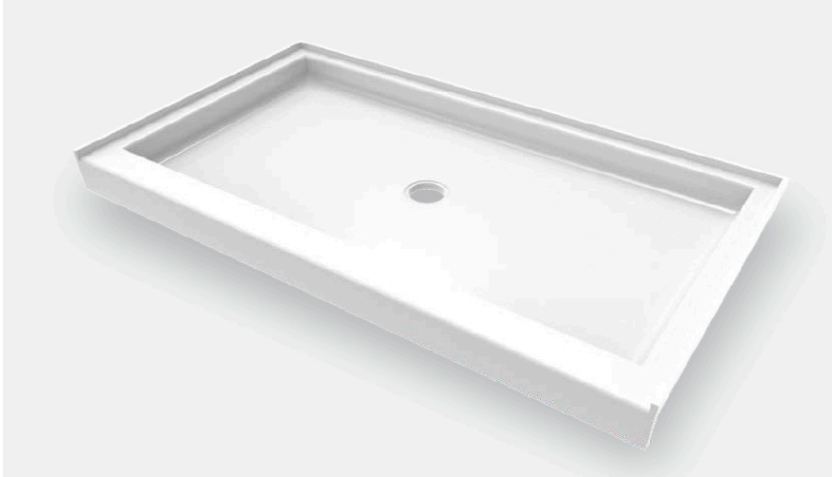

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.

#### Optional Accessories

- Size : 34" x 60"
- Drain: Center 17-30


### Walk-In Shower Base

#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Integral curbs.
- Fiberglass flange.

#### Optional Accessories

- Size: 32" x 60" x 38"

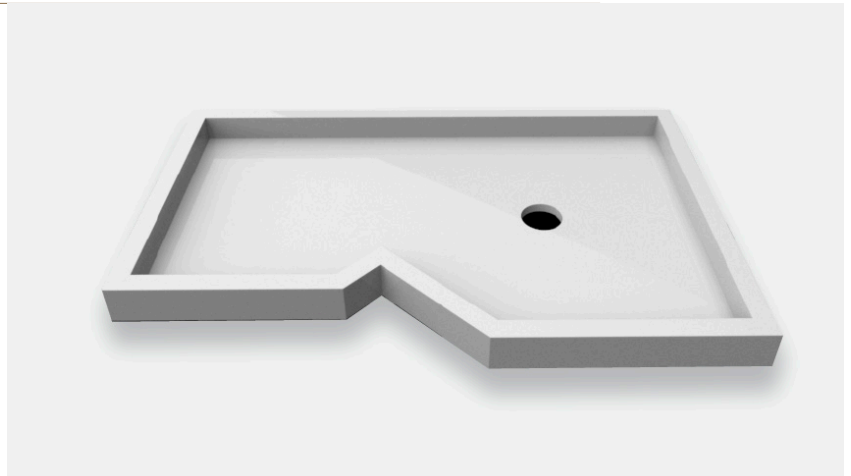

### 34" x 64" Frontal




#### Standard Features

- Solid one- piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant.
- Textured non - slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover not included.

#### Optional Accessories

- Size: 34" x 64"

### 30" x 64" Barrier Free

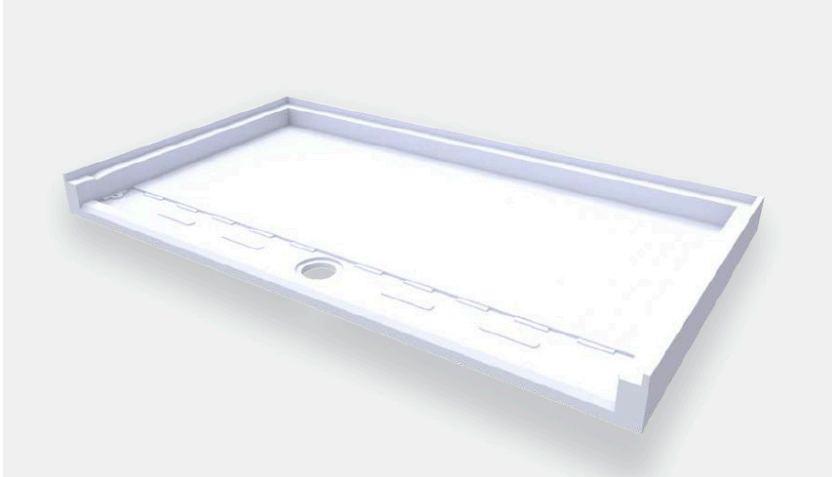

#### Standard Features

- Solid one – piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant.
- Bacteria resistant
- Textured non – slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover not included.

#### Optional Accessories

- Size: 30" x 64"


### 36"x 64" Barrier Free

#### Standard Features

- Solid one-piece construction.
- Pre levelled rests on sub-floor.
- Mold and mildew resistant
- Bacteria resistant
- Textured non-slip finish.
- Abrasion resistant gel coat surface.
- Stainless steel trench drain cover.
- Trench cover not included.


#### Optional Accessories

- Size: 36" x 64".

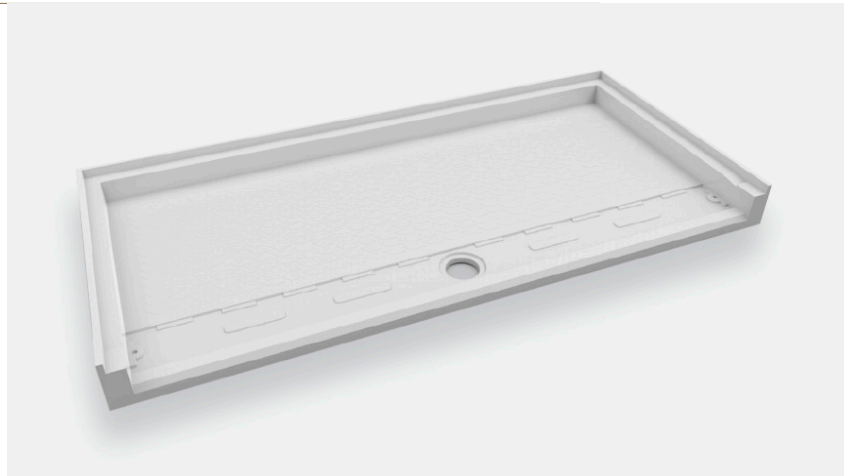


# Technical Data


30" X 60"

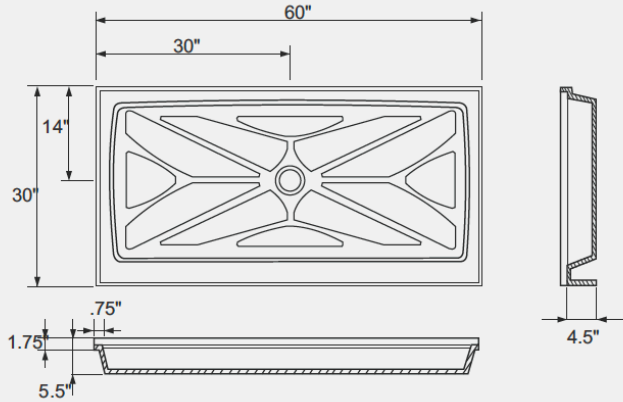


32" X 60"

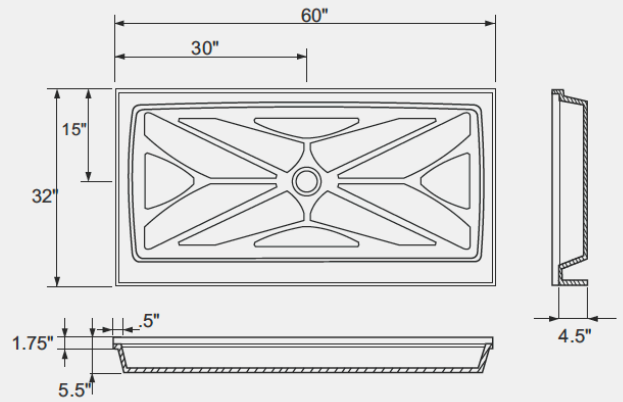


34" X 60"

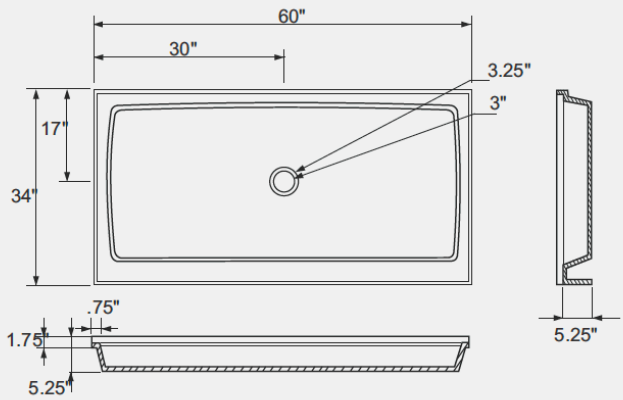


36" X 60"

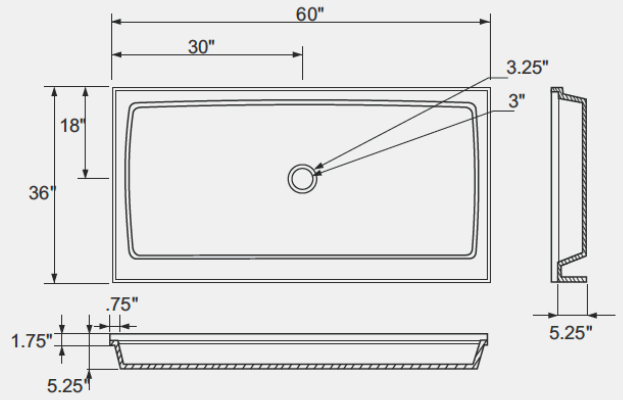

34" X 72"

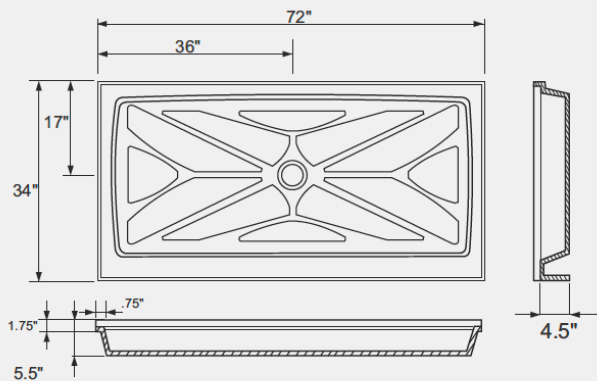


36" X 36"

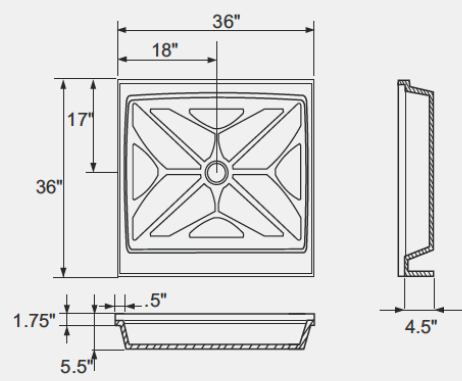


# Technical Data


36" X 42" Center Drain

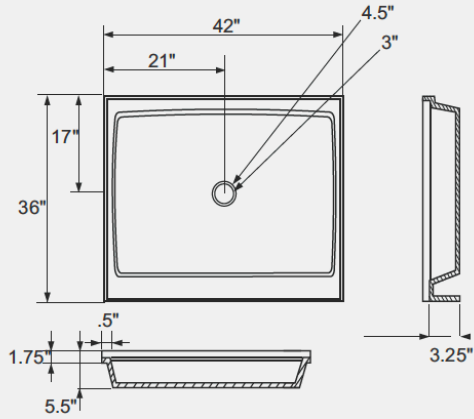


48" X 36" Shower Base

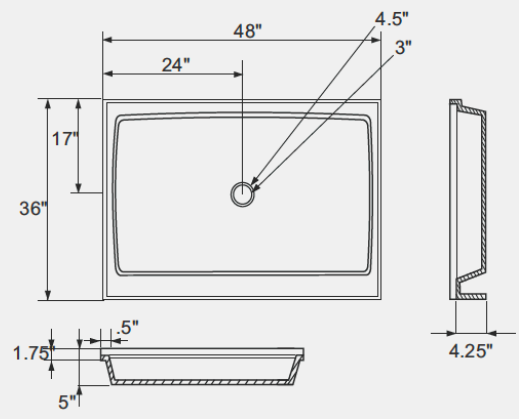


48" X 60"

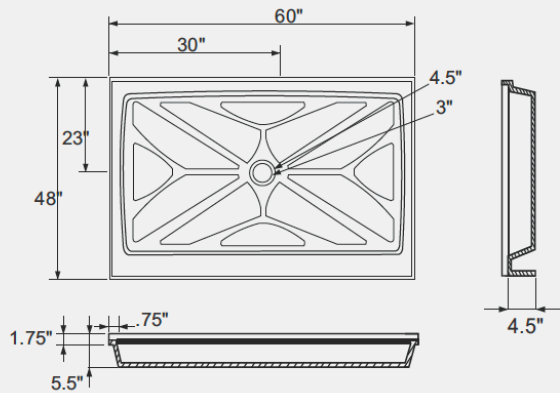


36" X 60" Reversible Trench Drain  
Shower Pan 2" Treshold

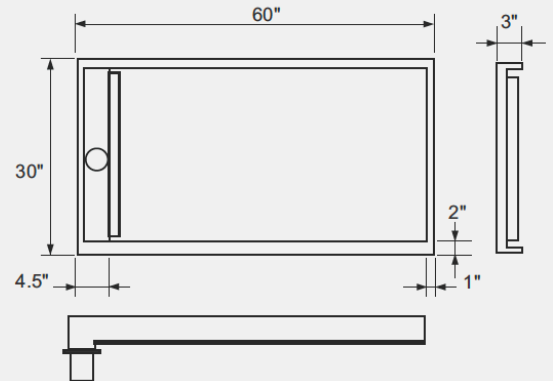

36" X 60" Reversible Trench Drain  
Shower Pan 3" Treshold

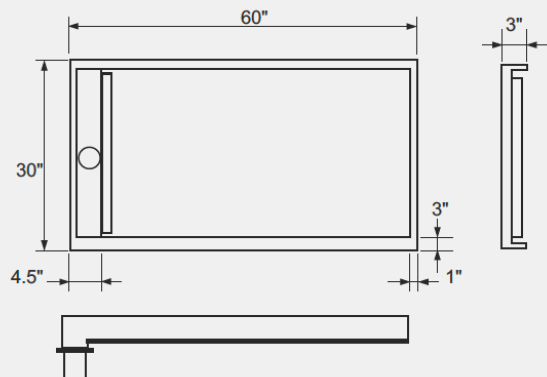


32" x 60" Reversible Trench Drain Shower Pan

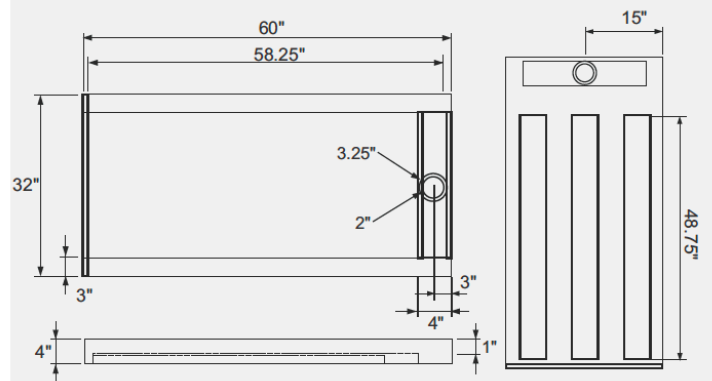




# Technical Data


34" X 60" Reversible Trench Drain Shower Pan

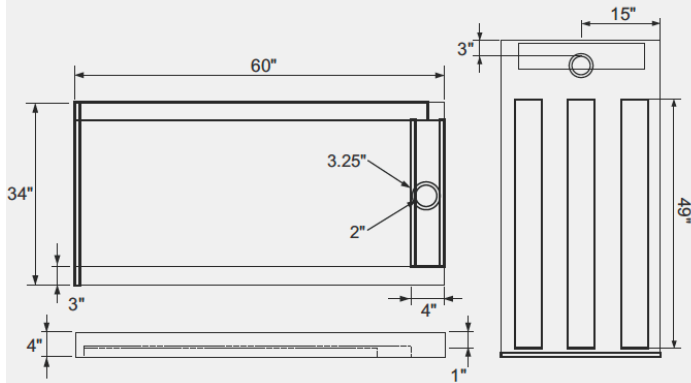


36" X 54"

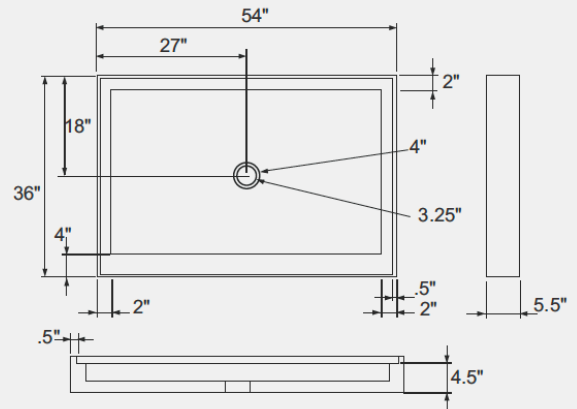


36" X 60" Off set Trench Drain Shower Pan

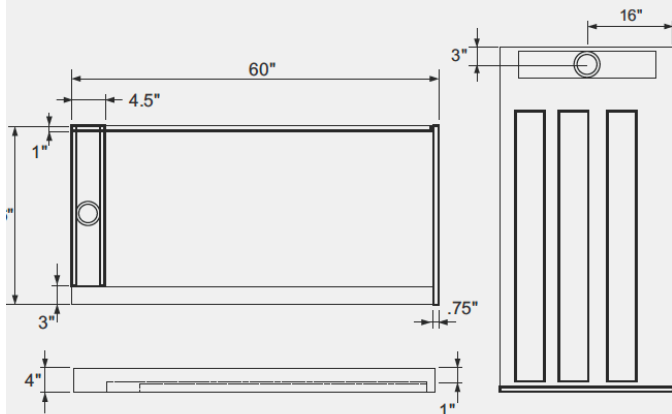


34" X 72" Off set Trench Drain Shower Pan

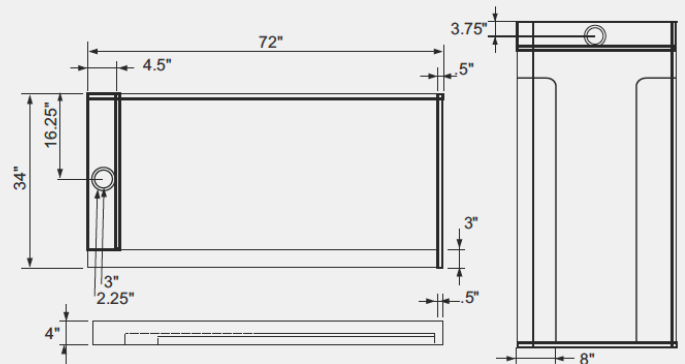

30" x 60" Shower Pan Trench Drain W/ Flange

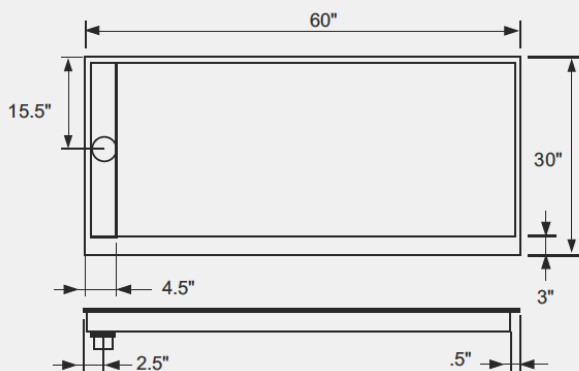


34" x 64" Barrier Free Shower Base

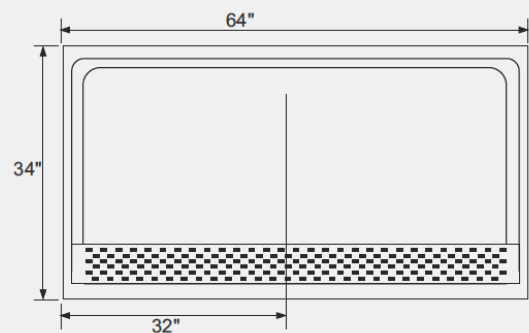


# Technical Data


36" X 36" Neo Angle

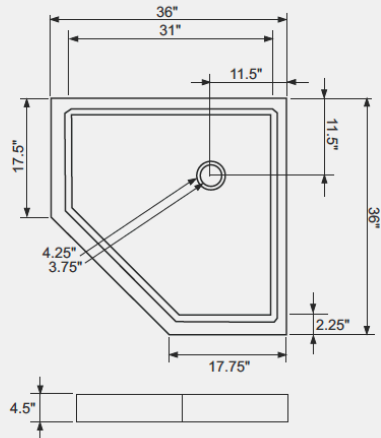


42" X 42" Neo Angle

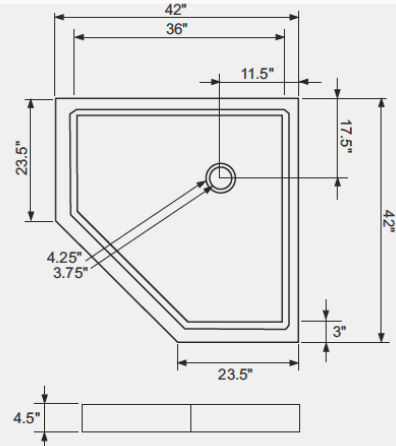


30" X 60" Off Set

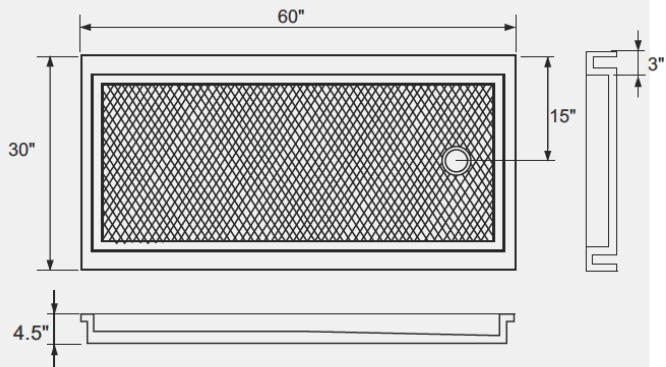


35 1/4" x 59" Off Set Drain

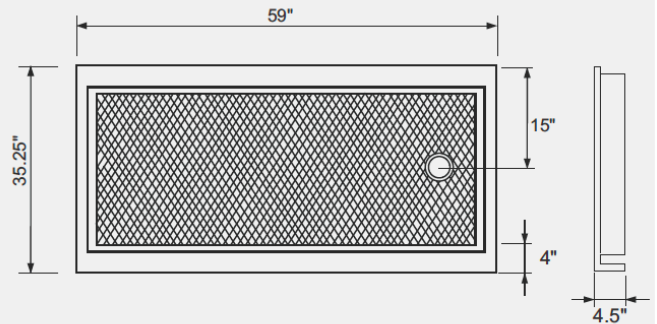

36" x 54" Standard Rectangle Shower Pan Off- set Drain

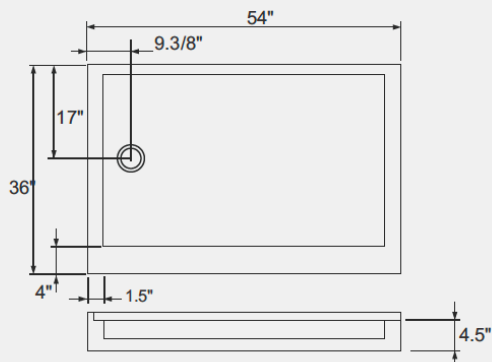


36" X 60" Corner Drain

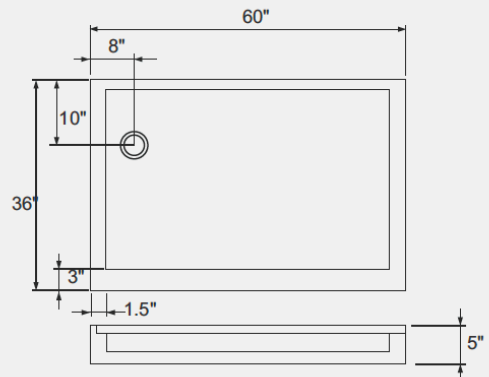


# Technical Data


Ada Roll In center Drain Shower Pan

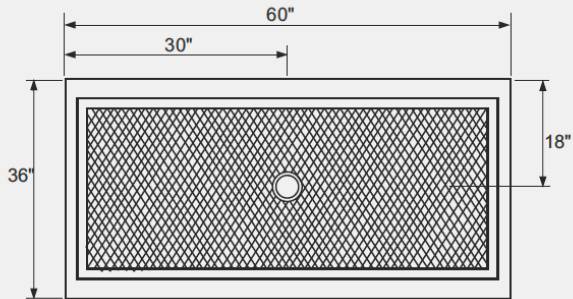


34" X 60" Tile Pattern Shower Pan

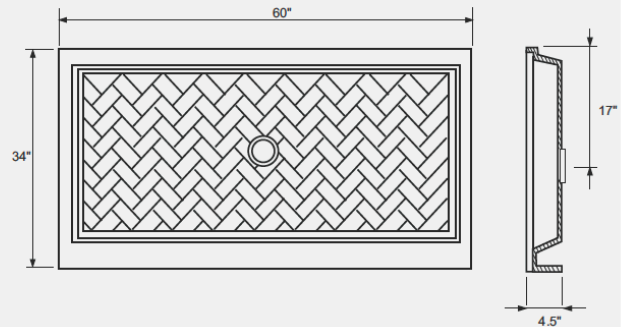


Walk in Shower Base

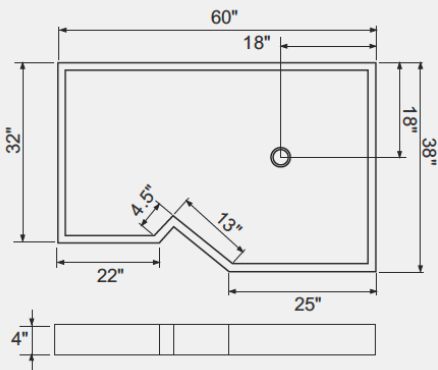


36" x 60" Reversible Shower Base

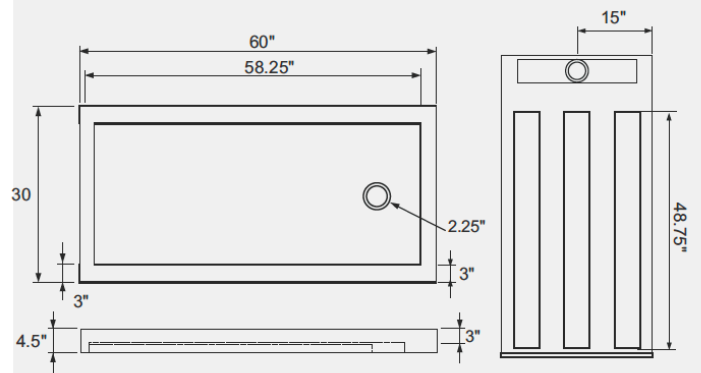

Custom Shower Base

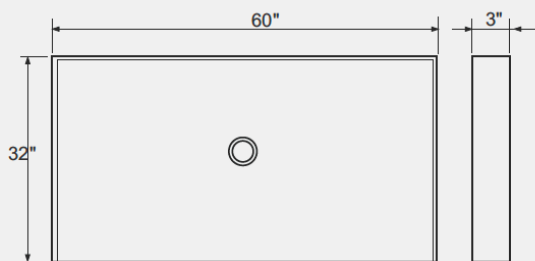


34" X 64" Frontal

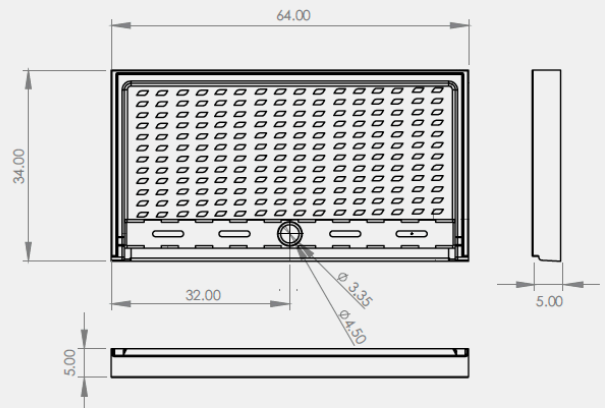


# Technical Data

30" X 64" Barrier Free

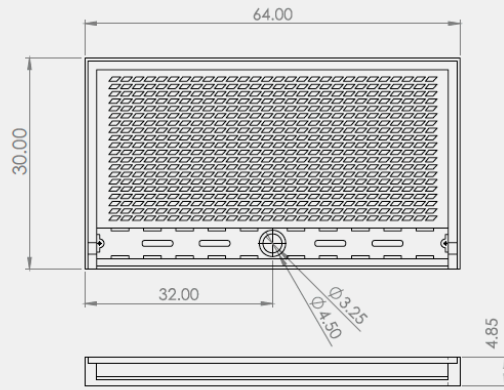

36" X 64" Barrier Free

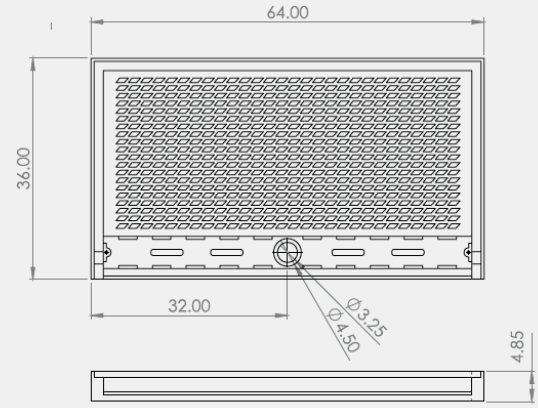




# Accessories



### Soap Dishes

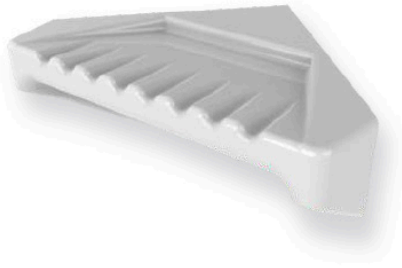

Corner Mount




Center Mount



Wall Mount

### Foot Rests

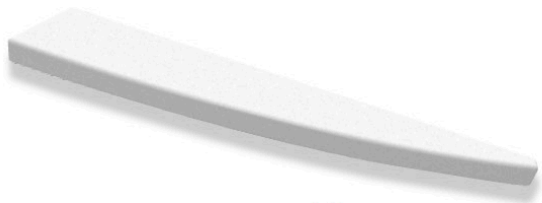

Foot Rest 30




Foot Rest 27



Foot Rest 15

### Holders

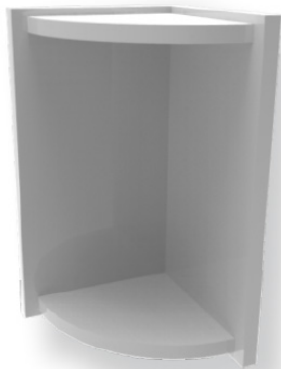


Shampoo Holder



Large Corner Holder

### Other Accessories

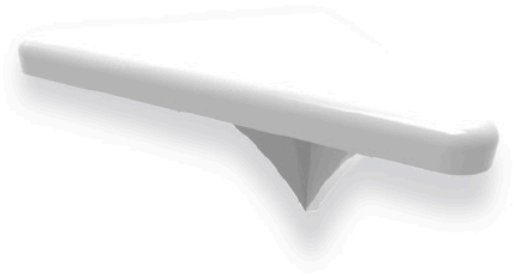

Foot Rest 6"



Shampoo Shelve



Corner & Trim Strip




Angle Soap Dish



Accessory Ledge




Niche (Corner)

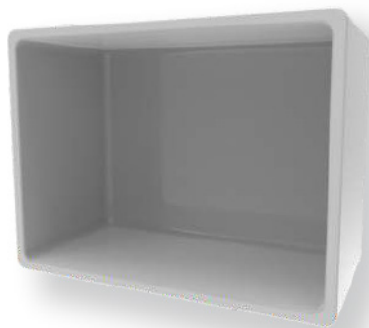


Niche (Frontal)

# Technical Data


Corner Mount

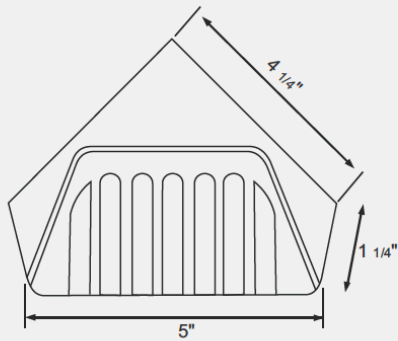


Center Mount

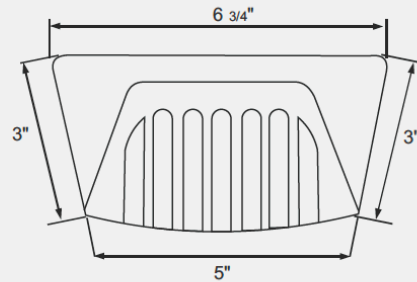


Wall Mount

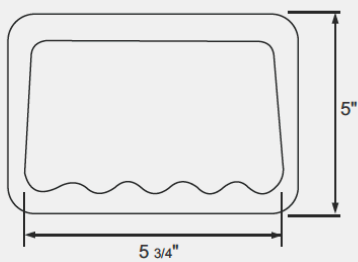


Foot Rest 30"

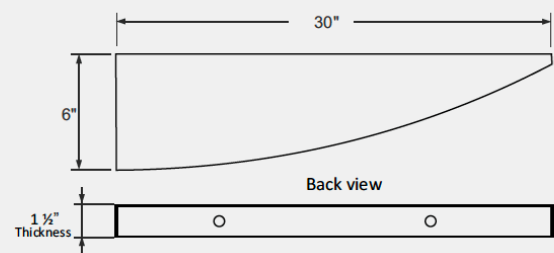

Foot Rest 27"

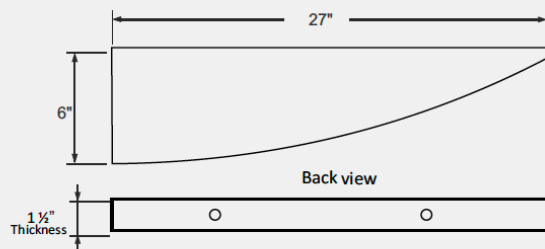


Foot Rest 15"

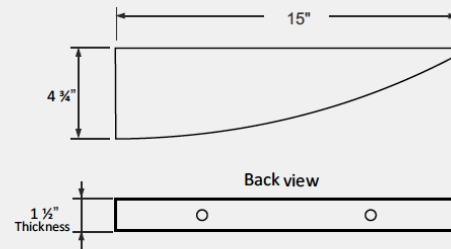




# Technical Data


Shampoo Holder

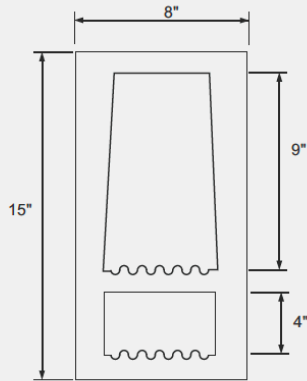


Large Corner Holder

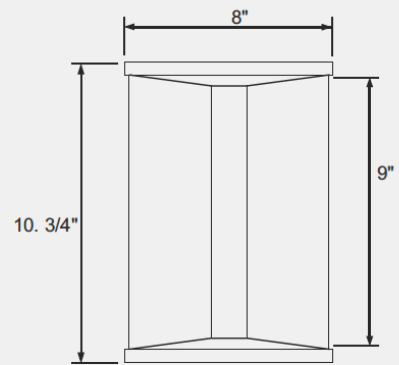


Shampoo Shelve

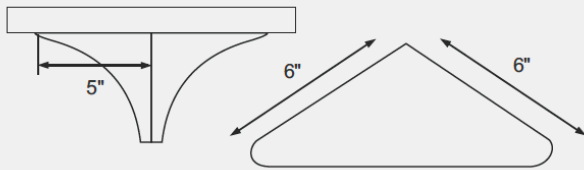


Foot Rest 6"

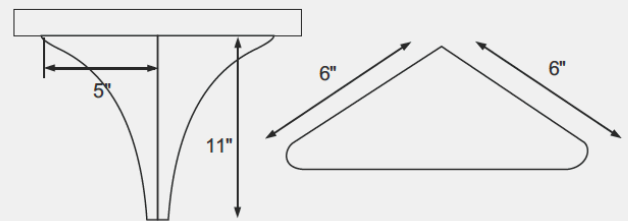

Angled Soap Dish 15" x 3"

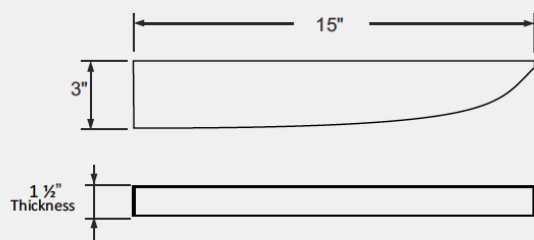


Accessorie Ledge

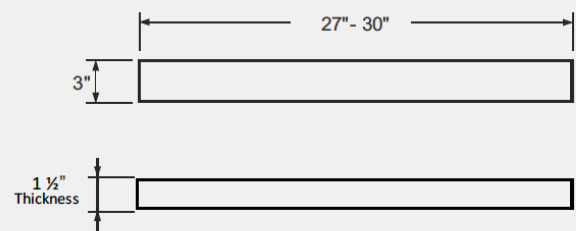


# Technical Data


Corner & Trim Strip

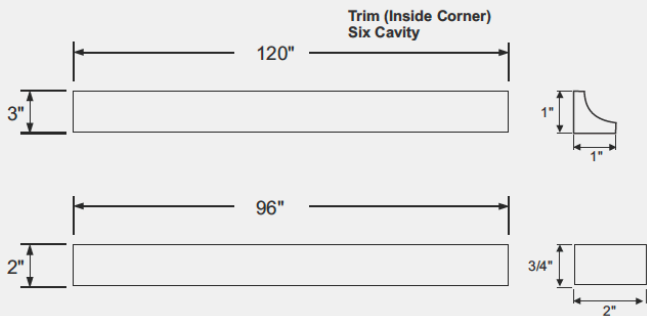

Niche Frontal

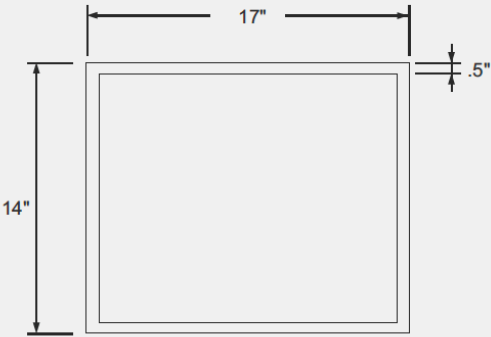

Niche Corner

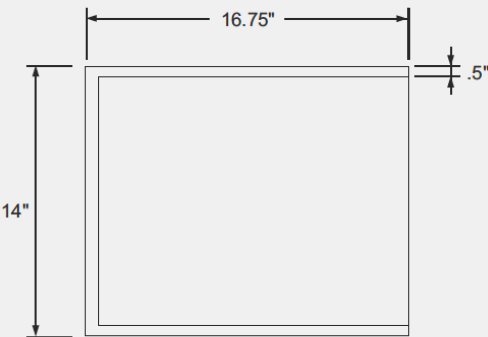


## Free Standing Bath Tubs



# Neptune




## Technical Data

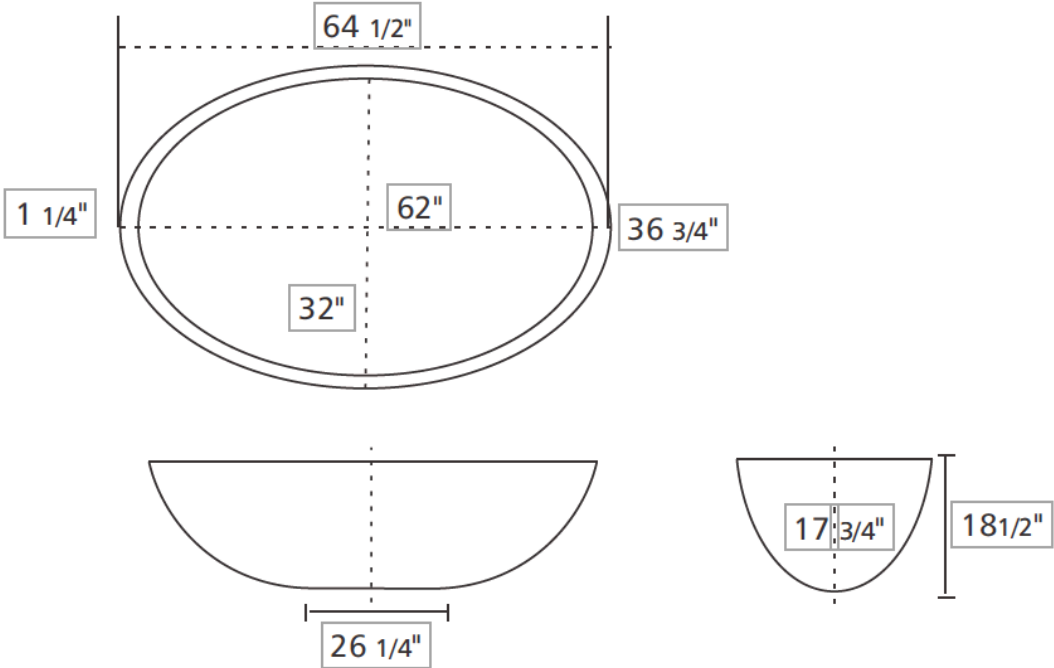



# Installation Instructions

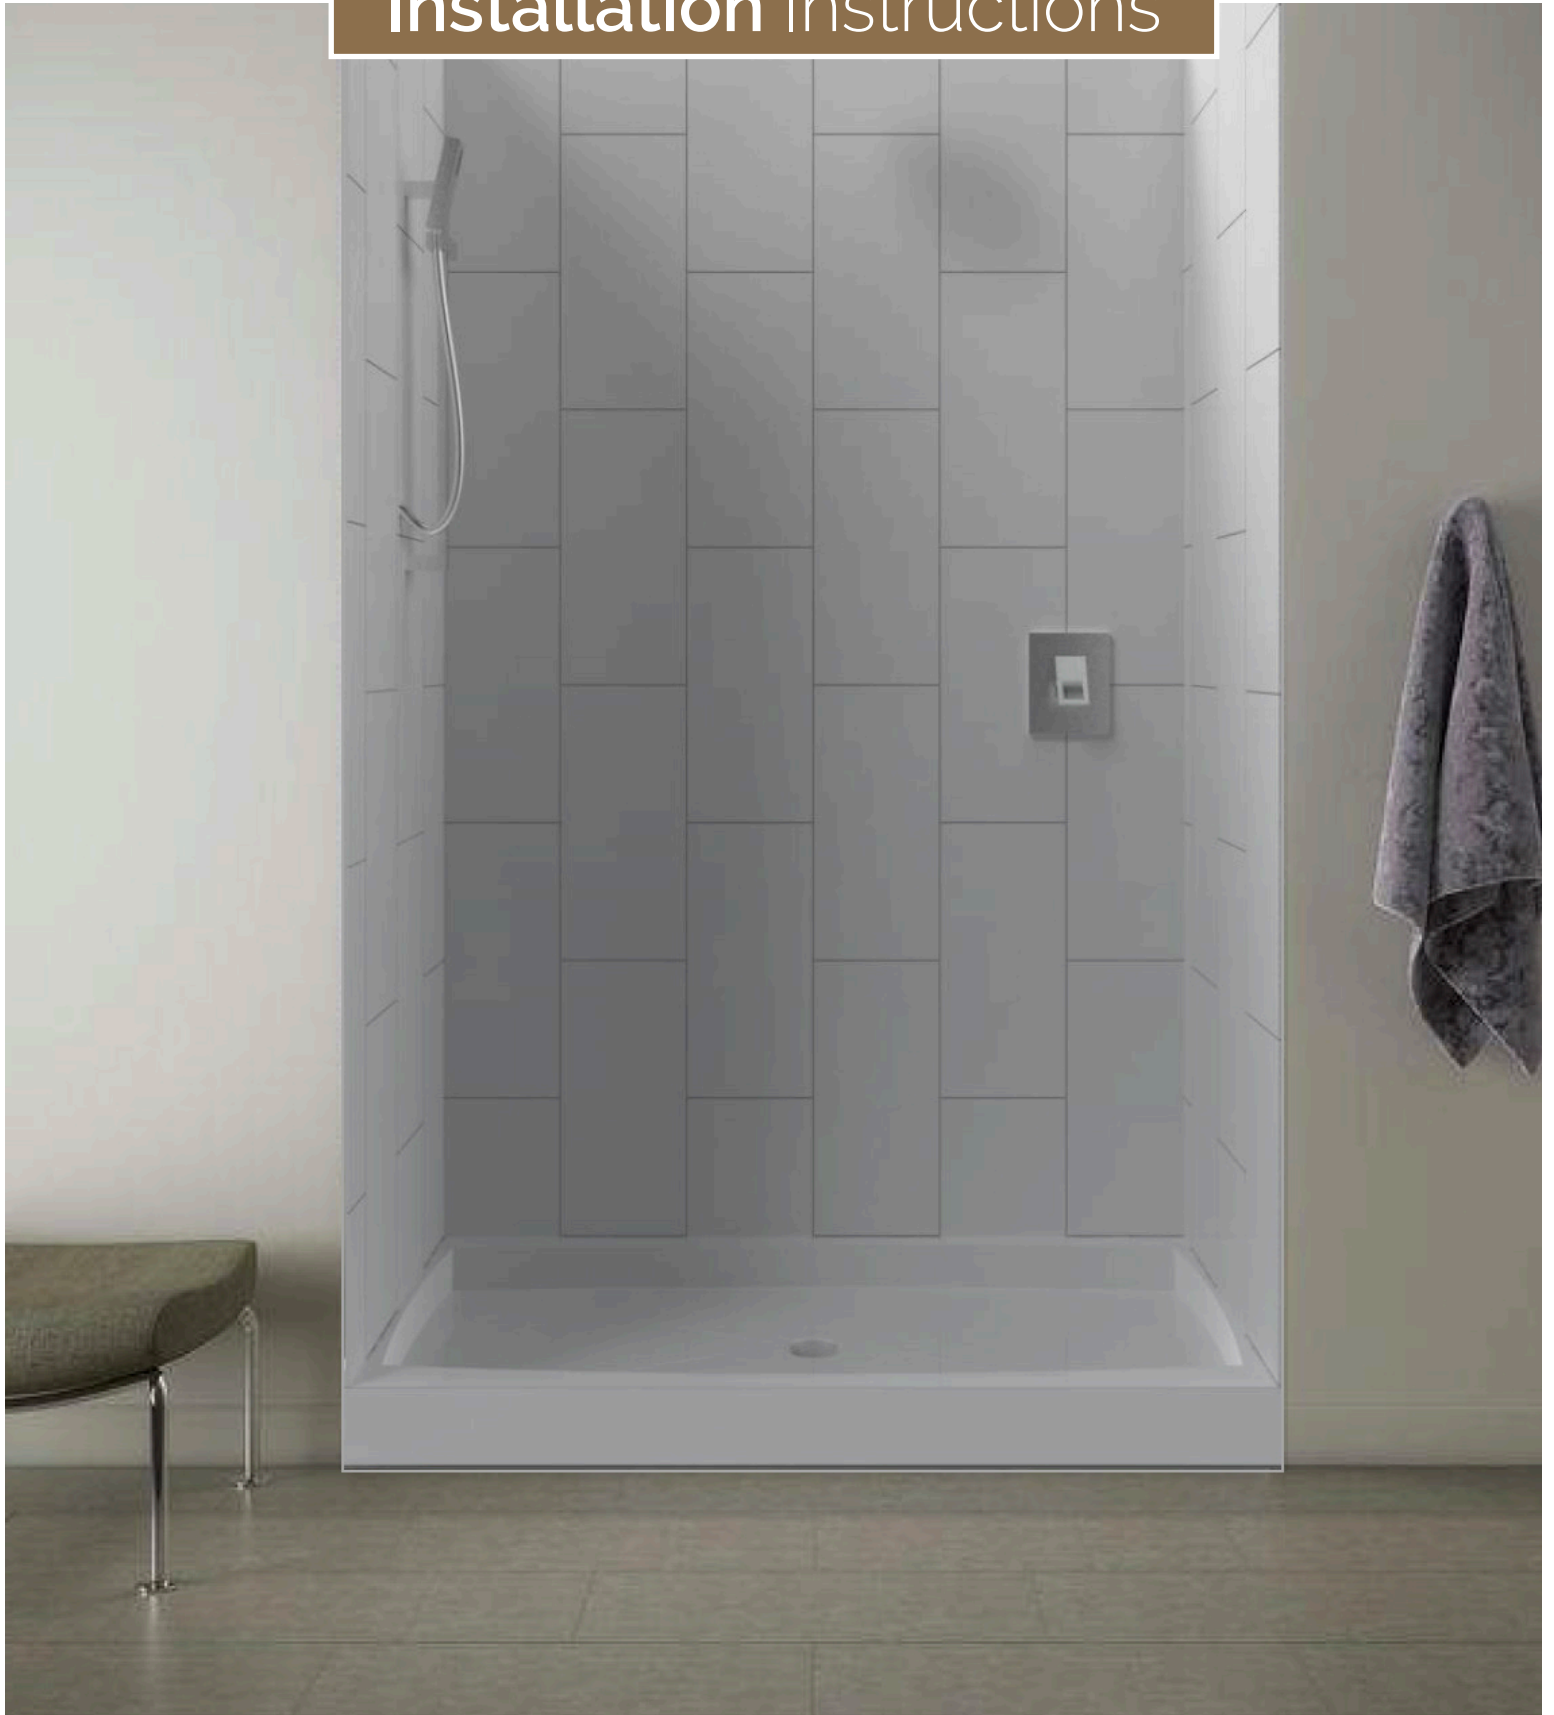


# Installation Instructions

## Wall Panel Systems

### Tools and materials required

- Electric or hand drill
- Level (24" min)
- Pencil
- Razor knife
- Caulking gun
- Hole saw (s)
- Adjustable wrench
- Screwdrivers (standard & Phillips)
- Masking tape (2" wide)
- Caulking Mineral spirits
- Adhesive for tub surrounds & shower walls- three (3) panels
- Tape measure

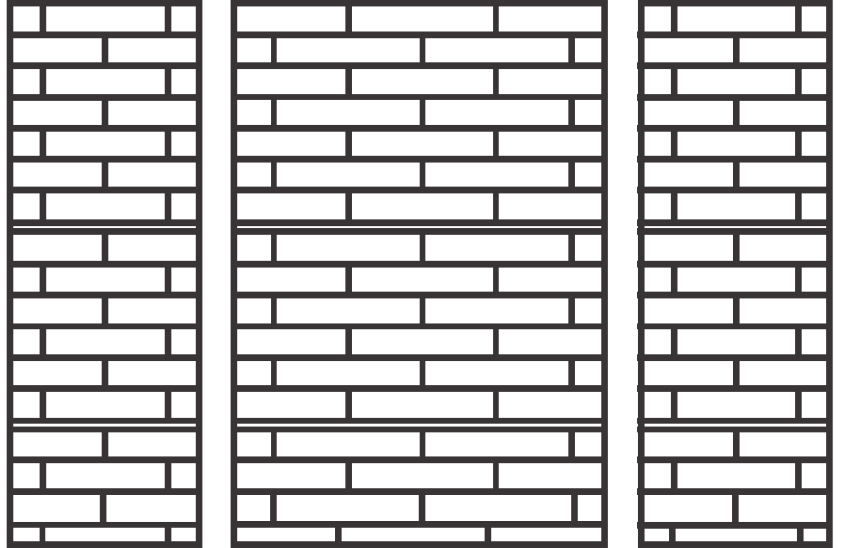

### Preparation

The wall panels may be installed over drywall, plaster, painted walls, plywood or any solid Wall, stud or existing tile surface. Wall surfaces must be clean, dry and free grease, dust and loose or flaky paint or plaster. Additional bracing to the support optional grab bars and / or seat should be installed at this time. Refer to the accessory manufacturer's instructions for proper installation according to local building codes. Plan rough plumbing requirements (drain-venting-supply lines) at this time according to local building code. Turn off water supply to bath tub. Remove existing control valve handle(s) cover plates and filler spout.

# Installation Instructions

## Wall Panel Systems

1

Accurately measure tub spout and handle(s) hole location on alcove side wall from the front edge of the bathtub and transfer dimensions to one of the 30" x 60" side panels. You may want to make a template (use shipping carton) to check hole layout before you cut holes into side panel. After you have double checked your measurements, using the proper size drill or hole saw, cut out holes for outlets.

2

Place Center Panel against backwall, raised from edge on bath tub rim covering the flange. Align center lines, using masking tape temporarily tape center panel in place. Position drilled side panel over tubspot and handle(s), be sure to align front edge with front edge of bathtub, temporarily tape in place. Temporarily tape remaining side panel in place, align front edge of side panel with front edge of bathtub. These will be your reference lines for permanently installing panels. Remove panels.

### Permanent Installation

3

Apply a 1/8" dia. bead of adhesive to the back side of the Center Panel using a random "zig-zag" pattern. Carefully position panel on backwall of alcove, align previously marked centrelines and top edge guide lines. Press panel in place, working from top edge to bottom. "Vent" panel following procedure described on adhesive cartridge before proceeding. Install drilled side panel next, be sure to align front and top edge guide line. Follow the same procedure for the remaining side wall.

### Venting Method

4

Apply adhesive to back side of panel, align all guide lines and press panel firmly to wall compressing the adhesive. Hold in place approximately 30 seconds, then pull the panel away, wait 4 minutes. Carefully reposition the panel and press firmly into place. To insure proper adhesion, go over the entire tub surround 20 minutes after all (3) three panels are in place, pressing firmly by hand or tapping with a padded block.

5

Wait approximately 12 hours before applying caulking to top, bottom, side and overlap edges. Remember to caulk around faucet spout and handle hole(s). Follow caulking instructions for clean up of excess caulk. Replace faucet spout and handle(s), turn on water supply to bathtub alcove. Wait 24 hours before using tub or shower.

# Installation Instructions

## Wall Panel Systems

### Care, Cleaning & Maintenance

The surface of your Walls may be cleaned with a mild soap solution in warm water using a soft cloth. When using a cleaner product, carefully read the label to ensure that the cleaner is safe for use on the material. Do not allow cleaners to sit or soak on the surface. Wipe surface clean and rinse completely with water immediately after cleaner application. Rinse and dry any over spray on nearby surfaces. Never use abrasive scouring powder or steel wool pads, as they will scratch the surface. A periodic coating of a high quality marine or automotive polish will help retain the finish.

### Installation Questions

Questions on the installation or missing parts, call

for assistance. Please have the installation

manual available when calling.






# Installation Instructions

## Shower Base


Confirm that all components have been included before beginning your installation. Floor levelling compound should be used under the shower base if your floor is not perfectly levelled. Do not screw or bolt the base to the floor.

### Important: Read these instructions before starting installation


#### Prepare walls, floor and base.

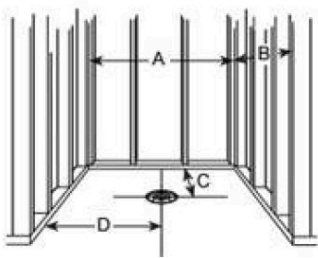

1. Frame alcove noting your base dimensions.

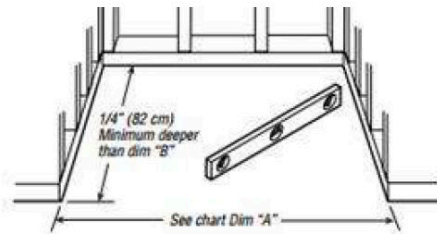


2. Position base and trace drain location.

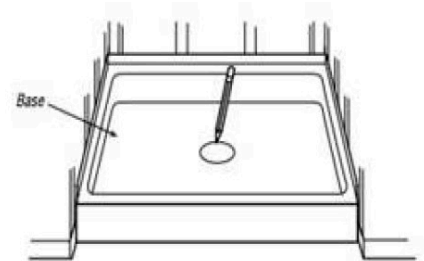


3. Cut drain access to install drain pipe.


#### Install shower base.

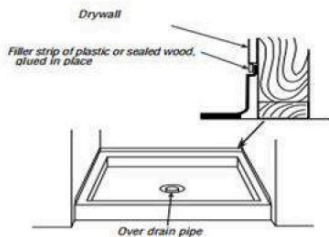

4. Install drywall and filler strip.

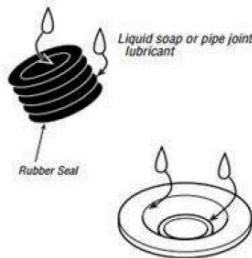


5. Lubricate rubber seal, pipe & drain and insert tap down until flush with drain pipe.

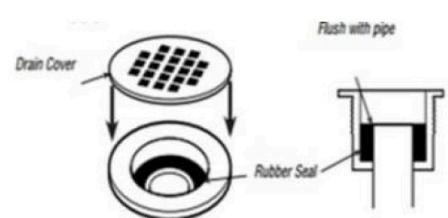

6. Check that seal is flush with pipe and install drain cover.

#### Care, Cleaning and Maintenance

For regular cleaning use only mild detergents or warm soapy water applied with a soft cloth. Always rinse surface after cleaning and dry by blotting with a damp cloth or chamois. Do not use scouring pads, gritty cloths or cleaners that are not recommended. Cleaners not listed are either not approved or are untested. Please choose and approved cleaner from the list. If you have any questions, please call Shower Walls Customer Service at 855-219-3751

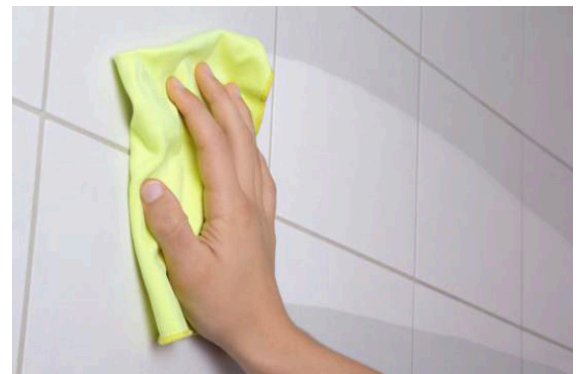

# Installation Instructions

## Trim Strips

This trim is generally used when cast marble panel systems are being applied on top of existing tile or other previously installed material, to cover the gap left by applying the new panel system over the existing material.

**Important: Read these instructions before starting installation**

Trim strips, as a rule, are manufactured up to 96". The installer should plan to trim each piece to fit the area in which it will be installed. If the shower panels do not extend to the ceiling, the trim should be cut so that the top of the trim is the same height as the panels it will be installed next to. If you require trim longer than 96", it should be ordered in separate pieces and will have to be seamed when installed to reach lengths of longer than 96". This trim is designed to fit snug against the tub/shower enclosure. The panel system should stop flush with the edge of the tub/shower base. If not, the trim will need to be notched to fit tight against the panel, to avoid an unnecessarily large caulk joint between the panel and the trim. Installing the 1" thick renovation trim strip.

### Installation Instructions

1. Measure the height of the area where the trim is to be installed. You may need to notch the trim around the base tile, if it is already set.
2. Cut the trim to fit. Sand the cut edges of the trim with 80 grit sandpaper to avoid cutting hands installation and while caulking the trim.
3. Apply construction adhesive to the back of the trim and install the threshold. Note: you may want to use a small amount of hot melt glue to help hold the trim in place until the adhesive has time to set.
4. Caulk with appropriate color latex or acrylic caulk around the edges of trim, where marble meets drywall or painted or wallpapered walls. Use 100% silicone, color matched to match the marble to marble and marble to tub/shower base seams.

### Tools and materials required

- Circular saw with masonry blade.
- Measuring tape.
- Pencil
- Razor knife
- Speed square or framing square
- 100% silicone for marble to marble seams ( color matched for the marble), if necessary.
- Latex caulk for marble to drywall seams.
- Clean, dry cloths to clean trim and wipe caulking.
- Masking tape (2" wide)
- Construction adhesive for adhering Trim to the wall.
- Hot melt glue gun and glue sticks.

# Installation Instructions

## Accessory Ledge Option 1

### Important: Read these instructions before starting installation

In preparation, before installing this accessory ledge, you will need to have completed the installation of the panel system and sealed the seams of the shower where the ledge is to be installed with 100% silicone.

### Installation Instructions

1. The installer should measure from the trimmed end of the ledge to the first hole and then mark the first hole centered, then measure from the unfinished end to the second hold and mark the hole that distance from the back wall, keeping the hole centered.
2. Pre-drill the holes for the mounting hardware using the 3/16" masonry drill bit and the corded drill.
3. Apply 100% Silicone to the back of the ledge and into the holes where the 3" Truss head screws will go. Firmly press the accessories ledge into place.
4. Be sure to immediately clean up any silicone that may have squeezed out from behind the ledge. A clean, dry cloth should've all that is needed, but acetone or mineral spirits can be used on a rag to clean up excess silicone.
5. Once the ledge is secure in place, seal around the entire perimeter of the ledge to the wall with color matching 100% silicone.

### Tools and materials required

- Drill, preferably corded, for drilling holes.
- 3/16" masonry drill bit
- Measuring tape
- Pencil
- 100% Silicone for marble to marble seams ( color matched for the marble)
- Clean, dry cloth for the accessory ledge and the wall.
- Phillips Head Screwdriver to tighten screws when attaching standoff mounting tubes 8"
- 2-3" Stainless Steel Truss head screws.

*The accessories ledge should be allowed to remain in place for a minimum of 48 hours to allow the silicone to cure before applied. Absolutely NO weight should be applied during the first 48 hours as this will weaken the silicone bond. If the ledge is used before the allotted 48 hours all warranties will be void.*

**Disclaimer Notice:** *If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the shower is occupied and the ledge detaches, physical injury to the occupant of the shower can occur.*



# Installation Instructions

## Accessory Ledge Option 2

### Important: Read these instructions before starting installation

In preparation, before installing this accessory ledge, you will need to have completed the installation of the panel system and sealed the seams of the shower where the ledge is to be installed with 100% silicone.

### Installation Instructions

1. The installer should measure from the trimmed end of the ledge to the first hole and then mark the first hole centered, then measure from the unfinished end to the second hold and mark the hole that distance from the back wall, keeping the hole centered.
2. Pre-drill the holes for the mounting hardware using the 3/16" masonry drill bit and the corded drill.
3. Insert an "L" shape wire. Twirl the wire and make sure you don't hit an obstruction. If you do hit a wall stud, you can move the hole location either forward or backward up to an inch and the ledge will still cover the other holes.
4. Assemble the mounting hardware as shown in drawing.
5. Install the Winglt Model # MAW35-SD as per instructions which accompany the Winglt package. Make sure to tighten the screw securely, as this assembly will be what supports most of the weight of the ledge and anything that is placed on it.
6. Apply 100% silicone to the entire back of the ledge and into the hole that will receive the mounting hardware.
7. Carefully align the holes with the mounting hardware on the wall and slide the ledge onto the mounting hardware. Apply even pressure and make sure the back of the ledge is pressed completely against the wall.
8. Be sure to immediately clean up any silicone that may have squeezed out behind the ledge. A clean, dry cloth should be all that is needed, but acetone or mineral spirits can be used on a rag to clean excess silicone.
9. Once the ledge is secure in place, seal around the entire perimeter of the ledge to the wall with color matching 100% silicone.

### Tools and materials required

- Drill, preferably corded, for drilling holes.
- 3/16" masonry drill bit
- Measuring tape
- Pencil
- 100% Silicone for marble to marble seams ( color matched for the marble)
- Clean, dry cloth for the accessory ledge and the wall.
- Phillips Head Screwdriver to tighten screws when attaching standoff mounting tubes 8"
- 2-Winglt MAW35-SD fasteners and 2 standoff tubes.
- Either a Winglt Apache 200 Drill bit p/n# or a 3/4 hole saw, for drilling holes for MAW35-SD Master Winglt.

*The accessories ledge should be allowed to remain in place for a minimum of 48 hours to allow the silicone to cure before applied. Absolutely NO weight should be applied during the first 48 hours as this will weaken the silicone bond. If the ledge is used before the allotted 48 hours all warranties will be void.*

**Disclaimer Notice:** *If the prescribed method of installation is not followed precisely, the accessories ledge may detach from the wall and cause damage to the panels and the walls. If the shower is occupied and the ledge detaches, physical injury to the occupant of the shower can occur.*

# Installation Instructions

## Corner Soap Dish

**Please read the following before attempting to install your new cast marble corner mount soap dish.**

These installation instructions have been written for Shower Walls Corner Mount Soap dish cast marble, corner mount soap dish. If you have received a different product than shown, please contact our office so we can send the proper instructions to you.

In preparation, before installing the soap dish, you will need to have completed the installation of the panel system and sealed the seams of the shower panels behind where the soap dish is to be installed with 100% silicone.


Two types of adhesive are needed to install the soap dish because they serve different purposes. The hot melt glue bonds immediately, but will not hold the soap dish for more than a few days. The silicone takes a few hours to cure, but after curing, they will secure the soap dish indefinitely.

### Installation Instructions

1. After determining the location of the soap dish, use the acetone to thoroughly clean the back of the soap dish and the wall where it is to be installed. Hold the soap dish up against the wall in the area to be installed. Check the level with the torpedo level. Adjust the soap dish as necessary to get the flat part of the soap dish level. Mark along the edge of the soap dish with your pencil on the wall. This will give you a reference line to use to keep it level while being glued to the wall.
2. Apply silicone to the cleaned back of the soap dish. Only a small "daub" of silicone is necessary. Place the silicone toward the outer edges. Apply a small amount of hot melt glue in the middle of the back of the soap dish. It is important that the two different adhesives do not mix, because they do not work well together when mixed. Once the hot melt glue has been applied, the soap dish needs to be installed immediately. Otherwise, the hot melt glue will cool. If that happens, scrape the hot melt glue off and reapply.
3. Any excess silicone and hot melt glue can be cleaned up after installation. The earlier it is cleaned, the easier it is to remove. Also, using a clean cloth rag and acetone, clean the pencil lines from the panel.

### Tools and materials required

- Torpedo Level.
- Silicone 100% and caulk gun.
- Hot melt glue and hot melt glue gun.
- Acetone
- Pencil

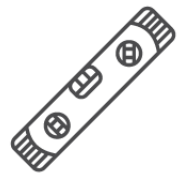

*Please use acetone only. Denatured alcohol or other water-based cleaners are not acceptable. If you do not have acetone, wiping with a clean, dry rag is an acceptable alternative.*

*If you have any questions, please call Shower Walls Customer Service at 1-855-219-3751.*



# Installation Instructions

## Shampoo Shelf 7"x 7"

**Please read the following before attempting to install your new cast marble shampoo shelf**

These installation instructions have been written for Shower Walls Corner Mount Soap dish cast marble, corner mount soap dish. If you have received a different product than shown, please contact our office so we can send the proper instructions to you.

In preparation, before installing the soap dish, you will need to have completed the installation of the panel system and sealed the seams of the shower panels behind where the soap dish is to be installed with 100% silicone.


Two types of adhesive are needed to install the soap dish because they serve different purposes. The hot melt glue bonds immediately, but will not hold the soap dish for more than a few days. The silicone takes a few hours to cure, but after curing, they will secure the soap dish indefinitely.

## Installation Instructions

1. First you will need to determine the location of the shampoo shelf. Once determined, make a mark with your pencil on the panel. This will be the height to the top of the shampoo shelf.
2. After determining the correct height for the shelf, use the acetone to thoroughly clean the back of the shampoo shelf and the wall where is to be installed.
3. Using the torpedo level, lightly make a level line to the corner, going onto the adjacent wall with the mark.
4. The 5 1/4" wide support should be installed first. Apply silicone to the clean back of the support, only a small amount is necessary. Place the silicone toward the outer edges of the supports. Then apply a small amount of hot glue to the middle of the back of the support. NOTE: It is important that the two different adhesives DO NOT mix. Once the hot melt glue has been applied, the supports need to be installed immediately. If they are not and your hot melt glue cools, the glue will need to be scrapped off and re-applied
5. The 5" wide support should be installed next, following the same procedure used to install the 5 1/2" support.
6. Apply a bead of silicone to the back sides of the shampoo shelf, and then put several dots of hot glue around the silicone, making sure the two adhesives don't mix. Next press the shampoo shelf firmly into the corner, against walls, hold for 30 seconds then wipe away any excess coming from behind the shampoo shelf. Using 100% silicone, color matched for the cast marble, seal around the shampoo shelf once installation is complete.
7. Using a clean rag or cloth, wipe off the pencil lines and any excess silicone.

## Tools and materials required

- Torpedo Level.
- Silicone 100% and caulk gun.
- Hot melt glue and hot melt glue gun.
- Acetone
- Pencil

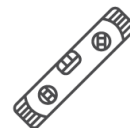

*Please use acetone only. Denatured alcohol or other water-based cleaners are not acceptable. If you do not have acetone, wiping with a clean, dry rag is an acceptable alternative.*

*If you have any questions, please call Shower Walls Customer Service at 1-855-219-3751.*

# FAQ (Frequently Asked Questions)

### What is Cultured Marble?

Culture Marble is a pour molded mix of Polyester Resin and a granulate filler, usually Calcium Carbonate, commonly called Limestone. Limestone is the same material that has become natural marble in some areas of the world. It is covered with a later of clear, high grade of polyester resin called gelcoat, which provides the smooth easily maintainable and polished surface.

The process is much like baking a cake, only we put the glazing on first. The molds are first assembled as needed, then waxed and sprayed with clear gelcoat. When the gelcoat hardens, a mixture of polyester resin, aggregate fillers, hardeners and pigments are poured into the upside down mold and let cure. After de-molding, the product is trimmed and polished before being shipped and installed to your bathroom.

### What are the benefits of cultured marble over other products?

The main benefit of Cultured Marble is the ability to eliminate all but a few seams. Therefore there are fewer areas for mildew to grow, and leaks to start. Cultured Marble baths are not totally seamless but compare 247 inches of smooth 25-year silicon to the 4000 inches of rough and porous grout line found in the average tub shower walls.

Sinks and countertops can be one piece doing away with the always hard to clean lip around china bowls. Unlike tile, where the porous grout is not weatherproof, or natural marble where the stone itself will leak and stain without constant maintenance, Cultured Marble with silicone seams is absolutely watertight.

Silicone is the same sealant that is keeping the water inside all glass aquariums all around the world. Fiber-glass units are watertight, however they constantly flex and therefore are prone to cracking over years of use. Additionally, they are not customizable and since their surface compound is pigmented, it is softer and wears faster than the clear gelcoat that covers our coloured products.

But aside from the technical aspect, Cultured Marble gives you, unlike any other product, the ability to coordinate your bathroom the way you want to. Choose items in matching or contrasting colors from the sink to tub or shower and surrounding walls, all sized and shaped to fit your particular needs. We have 14 shower pan molds, 14 tub molds and 16 different sink styles in over 200 colors.

# FAQ (Frequently Asked Questions)

### **Why use Cultured Marble or Granite instead of tile for showers?**

Cultured marble/granite panels and shower pans are solid pieces with no grout lines to clean or keep sealed. The seams are sealed with a mildew resistant 100% silicone caulk that requires little in the way of maintenance. Also, building structures will shift with the change of temperatures, this may cause grout lines to crack and crumble. This problem is avoided with the use of cultured marble/granite.

### **How do I care for Cultured Marble?**


Cultured Marble takes very little maintenance. No regular stripping and resealing like stone, no scrubbing of grout lines, just a little wiping. However there are some things to keep in mind...No abrasive cleaners, and never use a scouring pad. Powdered cleaners should not be used. Avoid prolonged exposure to solvents, acids and lye. Wipe down regularly using spray or aerosol household cleaners for the tub and tile, windows, dishes or appliances. Ammonia based cleaners also work well. Hardware stores also sell products that are specially made to care for gel coated products and fiberglass.

### **Can minor scratches be removed?**

Gloss Finish, Yes. Fine scratches can be removed with automotive paint buffing compound and a hand held polisher. A company technician should take care of deeper scratches. Matte Finish, these textures will not show minor scratches.

### **Will my Cultured Marble or Granite stain easily?**

Cultured marble/granite is thoroughly tested to resist stains from ink, hair dye, shoe polish, iodine, crayons, bleach, drain cleaners, ammonia, hydrogen peroxide, and many other products commonly found in bathrooms.

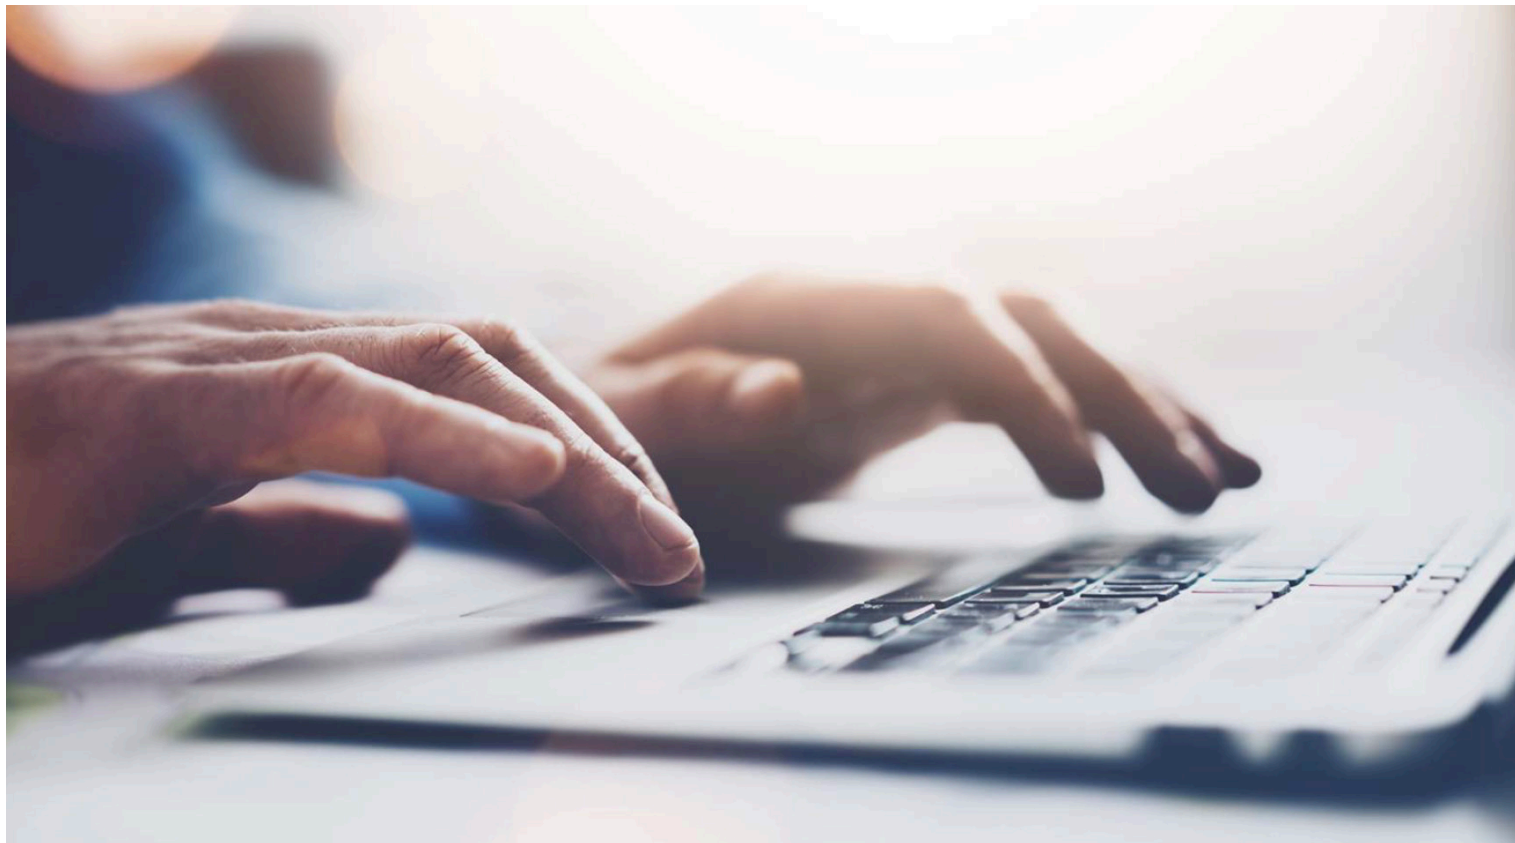

**Contact Us**



# MSI Hospitality

---

Servicing the industry to make Products  
**"Affordable and Attainable"**